


TRANSMISSION/CRANKSHAFT


BEARING REPLACEMENT

Remove the oil seal and countershaft bearing from the left crankcase.

Remove the mainshaft left bearing with the 15 mm bearing remover.

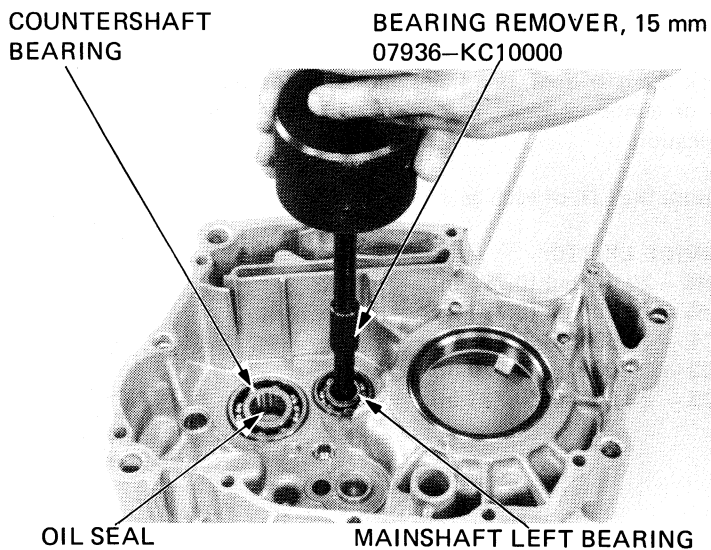

Remove the mainshaft right bearing from the right crankcase.

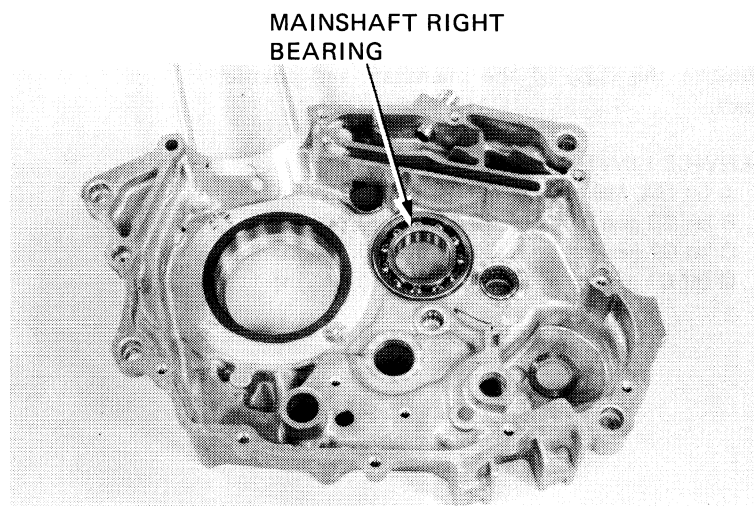

Drive the bearings into the right and left crankcases with the following tools:

Left crankcase:

Countershaft bearing –	
Driver	07749-0010000
Attachment, 42 x 47 mm	07746-0010300
Pilot, 20 mm	07746-0040500
Mainshaft left bearing –	
Driver	07749-0010000
Attachment, 32 x 35 mm	07746-0010100

Right crankcase:

Mainshaft right bearing –	
Driver	07749-0010000
Attachment, 52 x 55 mm	07746-0010400
Pilot, 30 mm	07746-0040700

Install the new countershaft oil seal.

