


FRONT WHEEL/SUSPENSION/BRAKE/STEERING

'84:
Bend down the lock washer tab and remove the bolt and lock washer.
Remove the throttle lever, arm and spring from the throttle housing.

ASSEMBLY


Install the throttle arm, spring and lever into the throttle housing.

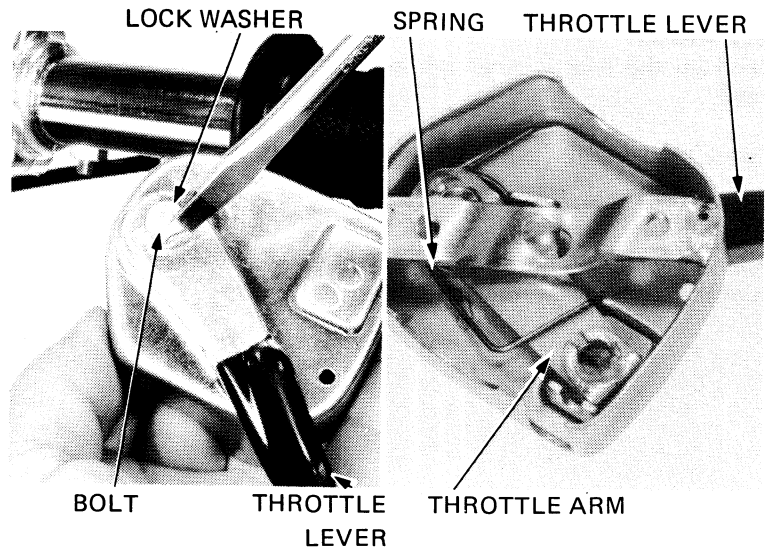

Tighten the throttle lever using the bolt and new lock washer.
Bend up the lock washer tab against the bolt head.

Check the lever for smooth operation.

Apply grease to the throttle cable end and connect the cable to the throttle arm.
Insert the rubber seal into the groove of the throttle housing.

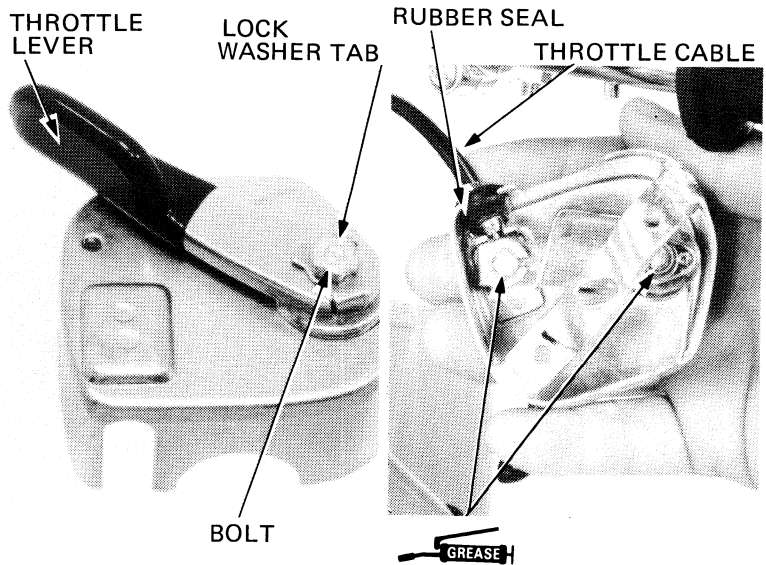

After '84:
Bend down the lock washer tab and remove the bolt and lock washer.
Remove the throttle lever, arm and spring from the throttle housing.
Remove the screws and throttle housing.

ASSEMBLY

Install the throttle housing and screws.

Install the throttle arm, spring and lever into the throttle housing.

