


Loosen the axle holder nuts.

Loosen and remove the front axle.

Remove the front wheel.

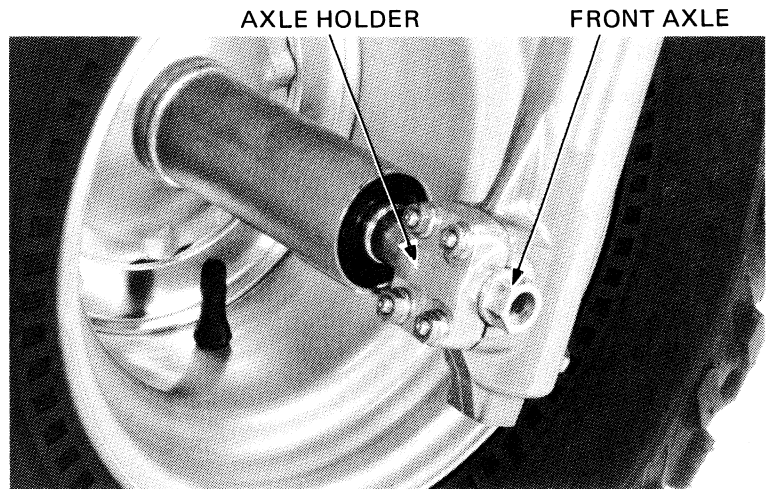


FRONT AXLE INSPECTION

Set the axle in V-blocks, rotate and measure the runout.

Actual runout is 1/2 of TIR (Total Indicator Reading).

SERVICE LIMIT: 0.5 mm (0.02 in)

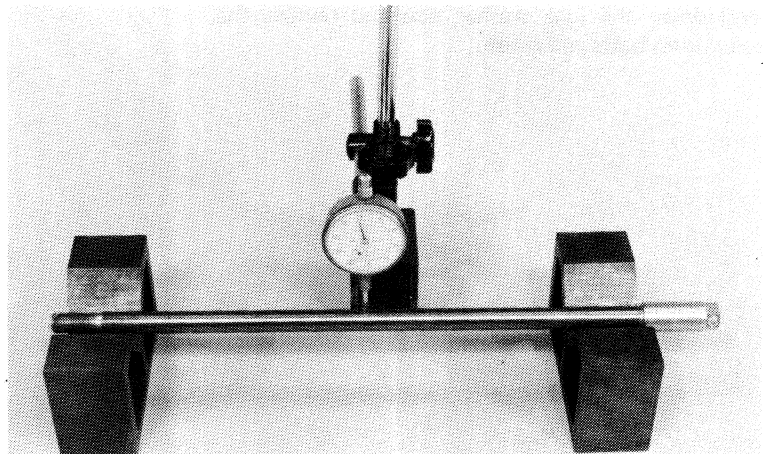

BEARING INSPECTION

Check the wheel bearings by placing the wheel between V-blocks and spinning the wheel by hand.

Replace the bearings with new ones if they are noisy or have excessive play.

