


FRONT WHEEL/SUSPENSION/BRAKE/ STEERING

DISASSEMBLY

Remove the brake panel.


BRAKE PANEL

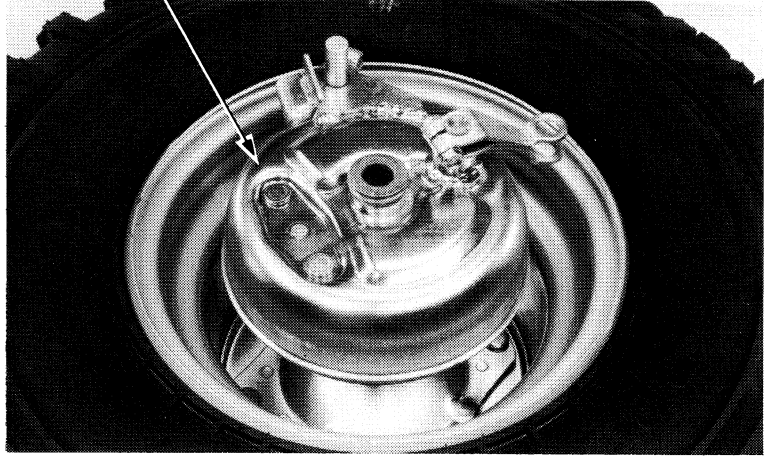

Bend down the lock washer tabs and remove the brake drum bolts and drum.

LOCK WASHERS

BRAKE DRUM

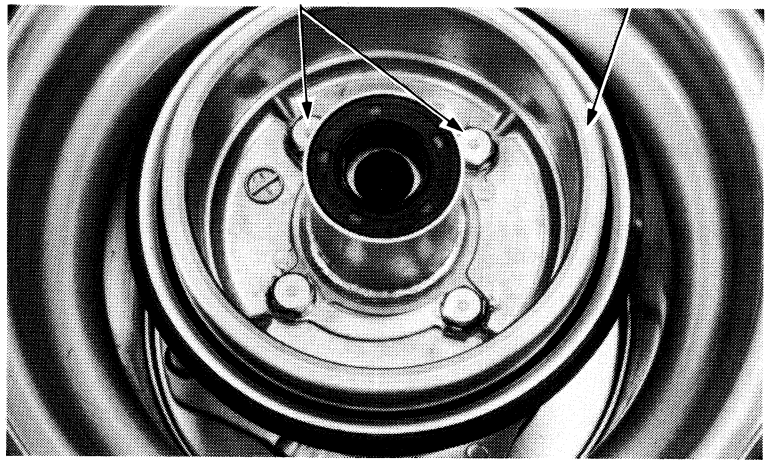

Remove the brake panel dust seal.

DUST SEAL

