

# FRONT WHEEL/SUSPENSION/BRAKE/STEERING

## FRONT WHEEL ASSEMBLY


Pack all front wheel bearing cavities with grease.

Drive in the left bearing squarely until it seats. Install the center collar and drive in the right bearing squarely until it seats.

### NOTE

Do not allow the bearings to tilt while driving them in.


DRIVER 07749-0010000

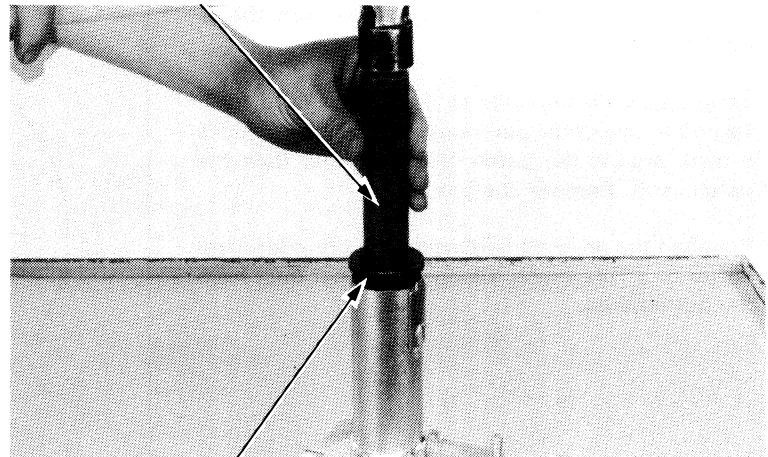

ATTACHEMNT, 42 x 47 mm  
PILOT, 15 mm

07746-0010300  
07746-0040300

Apply grease to the inside of the dust seals and install them into the wheel hub.

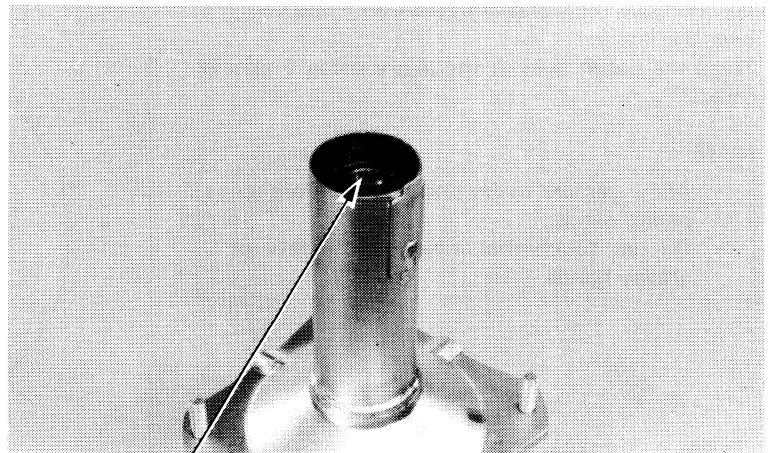

GREASE

Install the front wheel hub and tighten the hub nuts.

**TORQUE:** 20–25 N·m  
(2.0–2.5 kg·m, 14–18 ft·lb)

WHEEL HUB

NUTS

