

FRONT BRAKE


REMOVAL

Remove the front wheel (Page 11-6).
Remove the brake panel from the wheel (Page 11-8).

BRAKE DRUM INSPECTION

Remove the brake panel assembly and measure the brake drum I.D.

SERVICE LIMIT: 111 mm (4.4 in)

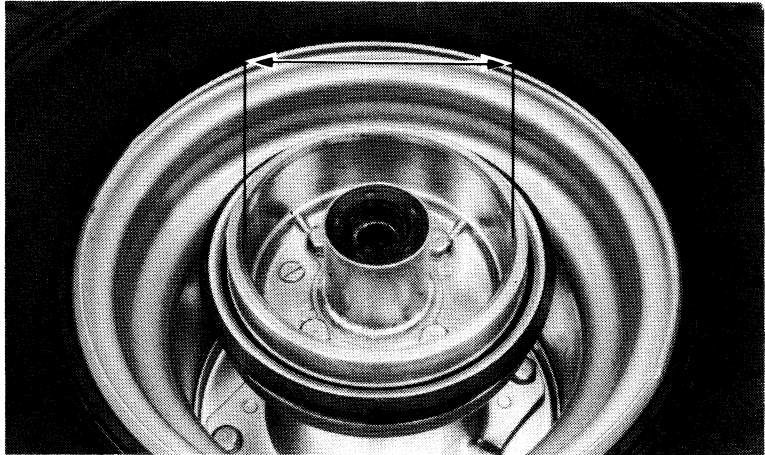


BRAKE LINING INSPECTION

Measure the brake lining thickness.

SERVICE LIMIT: 2 mm (0.1 in)

Replace the brake shoes if they are thinner than the service limit.

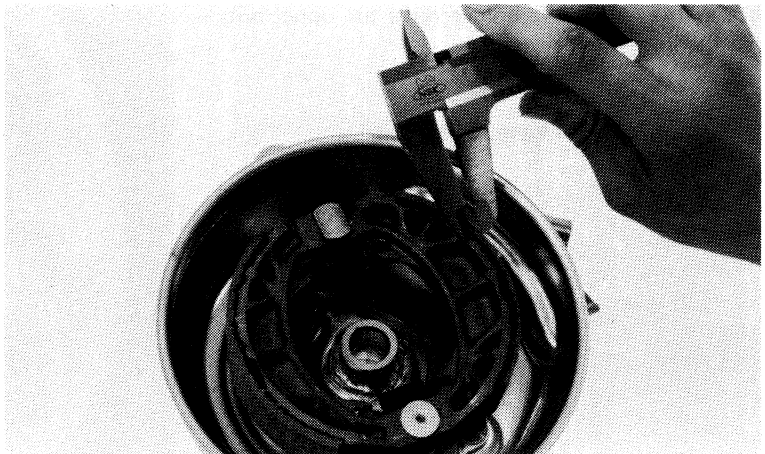

BRAKE PANEL DISASSEMBLY

Expand and remove the brake shoes by hand.

