


FRONT WHEEL/SUSPENSION/BRAKE/STEERING


Inspect the bottom cone race for wear or damage and replace if necessary.
Remove the bottom cone race with a hammer and a drift.

INSTALLATION

Install a new washer and dust seal and drive a new cone race into place.

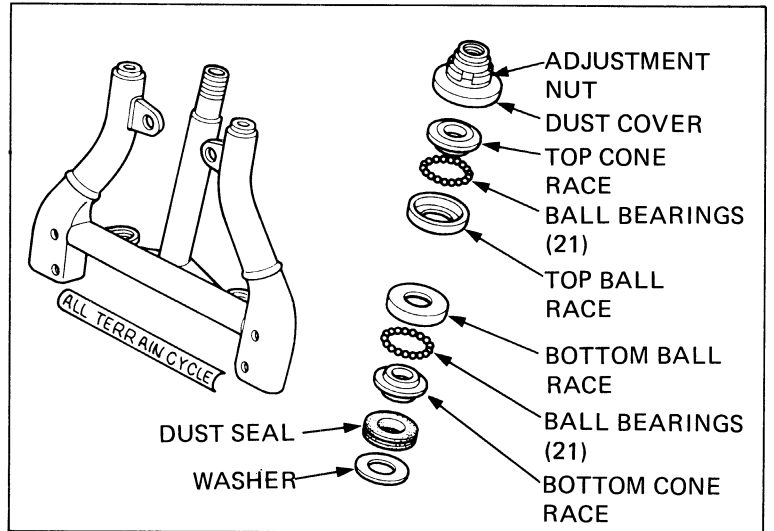


Drive new top and bottom ball races into head pipe with the special tools.

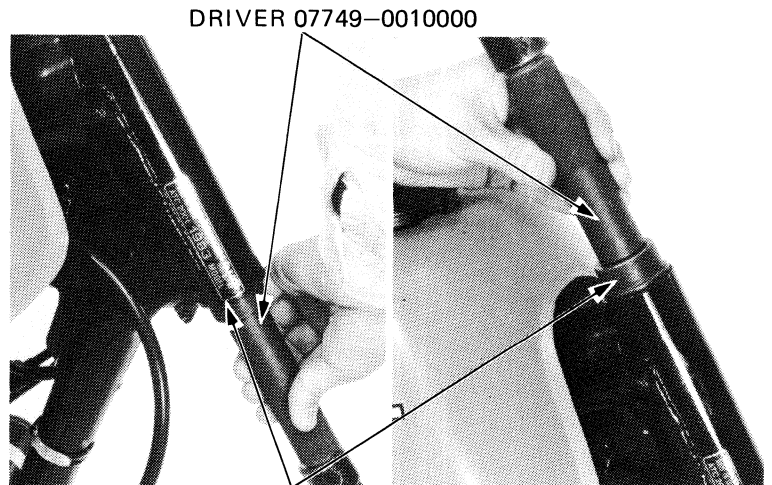

ATTACHMENT, 37 x 40 mm
07746-0010200

Apply grease to the top and bottom ball races and install 21 ball bearings for both the top and bottom ball races.
Insert the steering stem into the steering head pipe and install the top cone race.

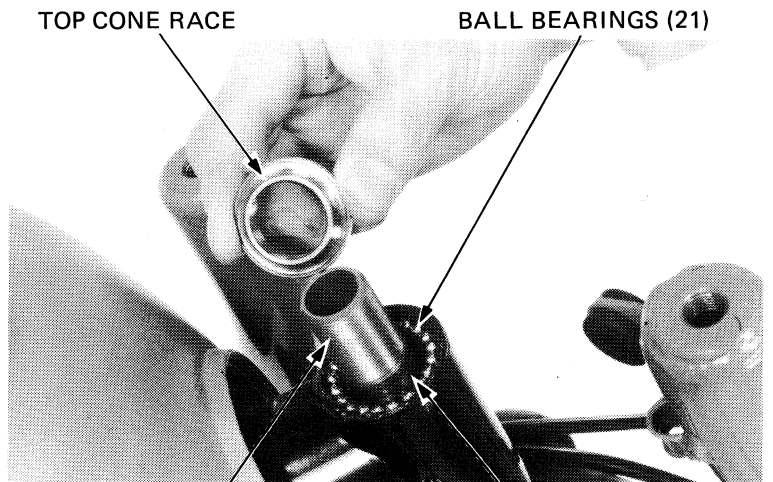

STEERING STEM

