


REAR WHEEL/BRAKE/DRIVE MECHANISM

Remove the brake drum.



Remove the O-ring.

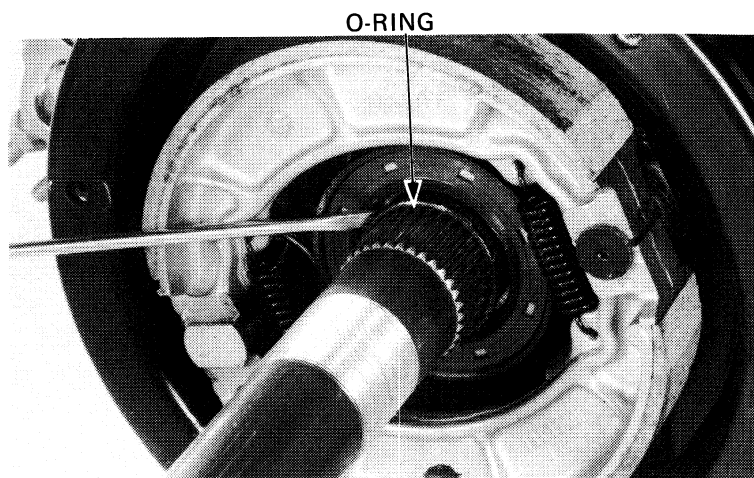

Drive the rear axle out from the right side using a soft hammer.

