


REAR WHEEL/BRAKE/DRIVE MECHANISM

Install the drive chain case bolts.

Install the following:

- rear axle and drive chain (Page 12–9).
- rear wheel (Page 12–3).

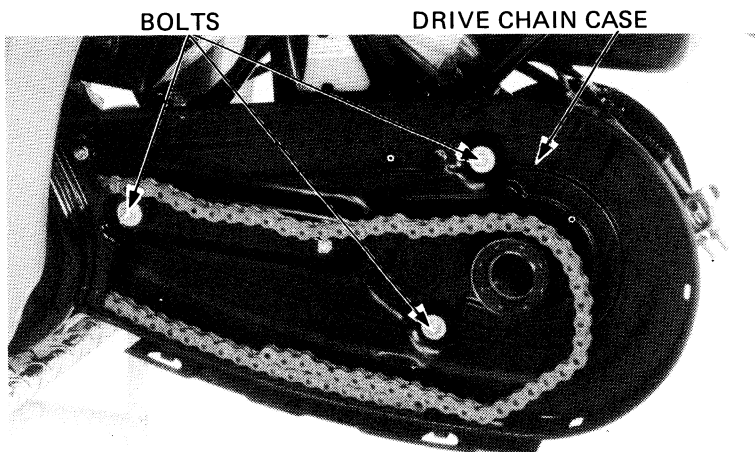

BRAKE PEDAL

REMOVAL

Remove the rear brake adjusting nuts.

Remove the brake pedal return spring.

Remove the cotter pin, washer and rear brake pedal and disconnect the brake cable from the pedal.

INSTALLATION

Install the brake pedal in the reverse order of removal.

NOTE

Apply grease to the brake pedal pivot shaft, link pin and cable end.

Adjust the rear brake (Page 3–14).

