

EXHAUST PIPE

Refer to Page 3-16 for spark arrester cleaning.

CAUTION

Do not service the exhaust pipe or muffler while they are hot.

REMOVAL

Loosen the exhaust pipe clamp bolts.

Remove the exhaust pipe joint nuts and exhaust pipe.

Remove the right rear fender.

Remove the muffler mounting bolts and muffler.

NOTE

Check the gasket and pipe seal for wear. Replace with a new one if necessary.

EXHAUST PIPE INSTALLATION

The installation sequence is essentially the reverse of removal.

NOTE

After installing, make sure that there are no exhaust leaks.

