

18. TROUBLESHOOTING

ENGINE DOES NOT START OR IS HARD TO START	18-1
ENGINE LACKS POWER	18-2
POOR PERFORMANCE AT LOW AND IDLE SPEEDS	18-3
POOR PERFORMANCE AT HIGH SPEEDS	18-4
POOR HANDLING	18-4

ENGINE DOES NOT START OR IS HARD TO START

