



## AIR CLEANER CASE

- Remove the seat/rear fender.
  - Remove the air cleaner case cover.
  - Remove the element holder and air cleaner element.
  - Loosen the connecting tube band.
  - Remove the bolts and air cleaner case.
- For air cleaner element service, see Page 2-4.

