


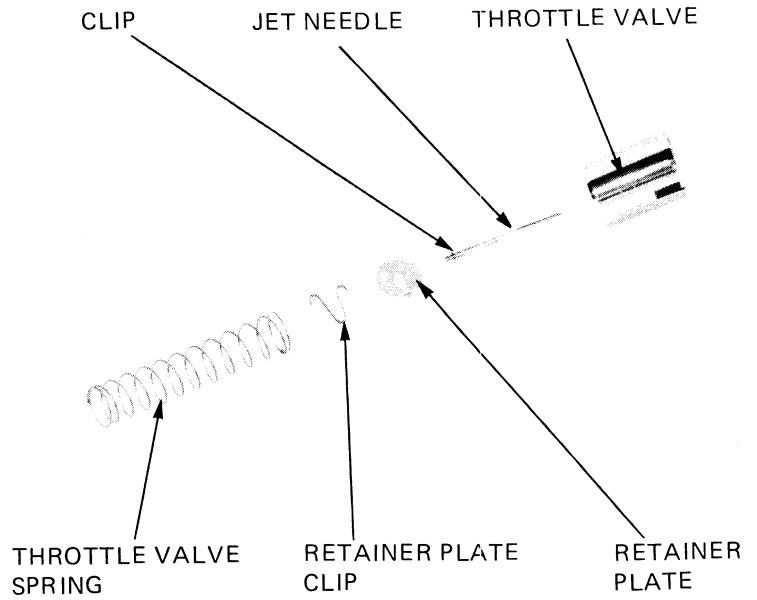

Remove the jet needle.
Check the jet needle and throttle valve for wear or damage.




CARBURETOR DISASSEMBLY/ INSPECTION

Remove the float chamber and pull the float pin off the chamber.

CAUTION:

Remove the float pin in the direction of the arrow.

Remove the carburetor float and float valve.

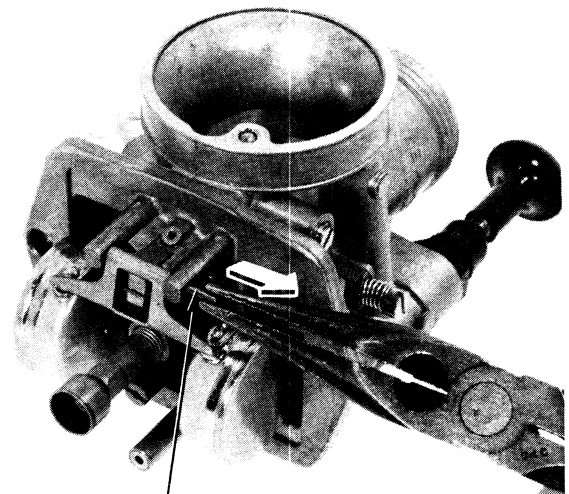

Check the valve and seat for wear or damage.
Replace the valve and seat as a set if either part is worn or damaged.
Check the float for deformation or presence of fuel.

