




INSPECTION

Inspect the drum shifter teeth for wear or damage.

Inspect the ratchet, plunger pawls and plunger springs for damage.

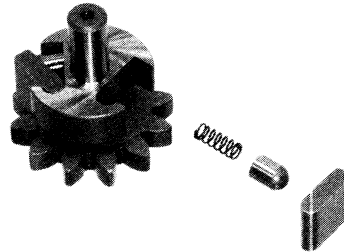

Inspect the stopper arms and arm springs for damage.



Inspect the gearshift spindle and return spring for damage.

