


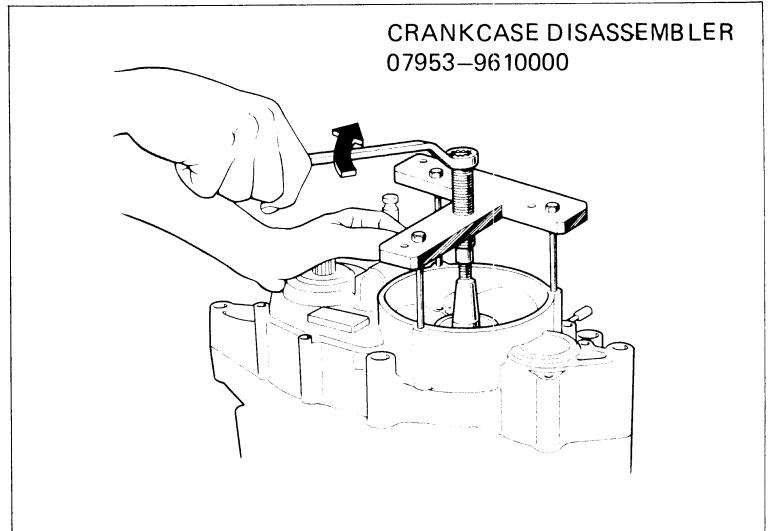

Set up the special tool on the right crankcase.
Remove the right crankcase.

NOTE


Separate the right and left crankcases from each other while tapping them at several locations with a soft hammer. Do not pry the crankcase apart with the end of a screwdriver.



KICKSTARTER

KICKSTARTER SPINDLE REMOVAL

Remove the kick return spring from the ratchet guide plate, then remove the kickstarter spindle.

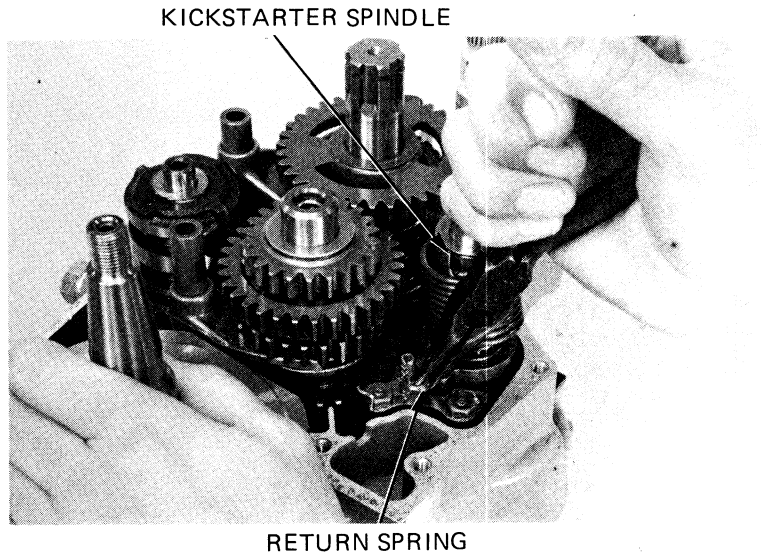

Disassemble the kickstarter.

