




### HEADLIGHT DISASSEMBLY

Disassemble the headlight.

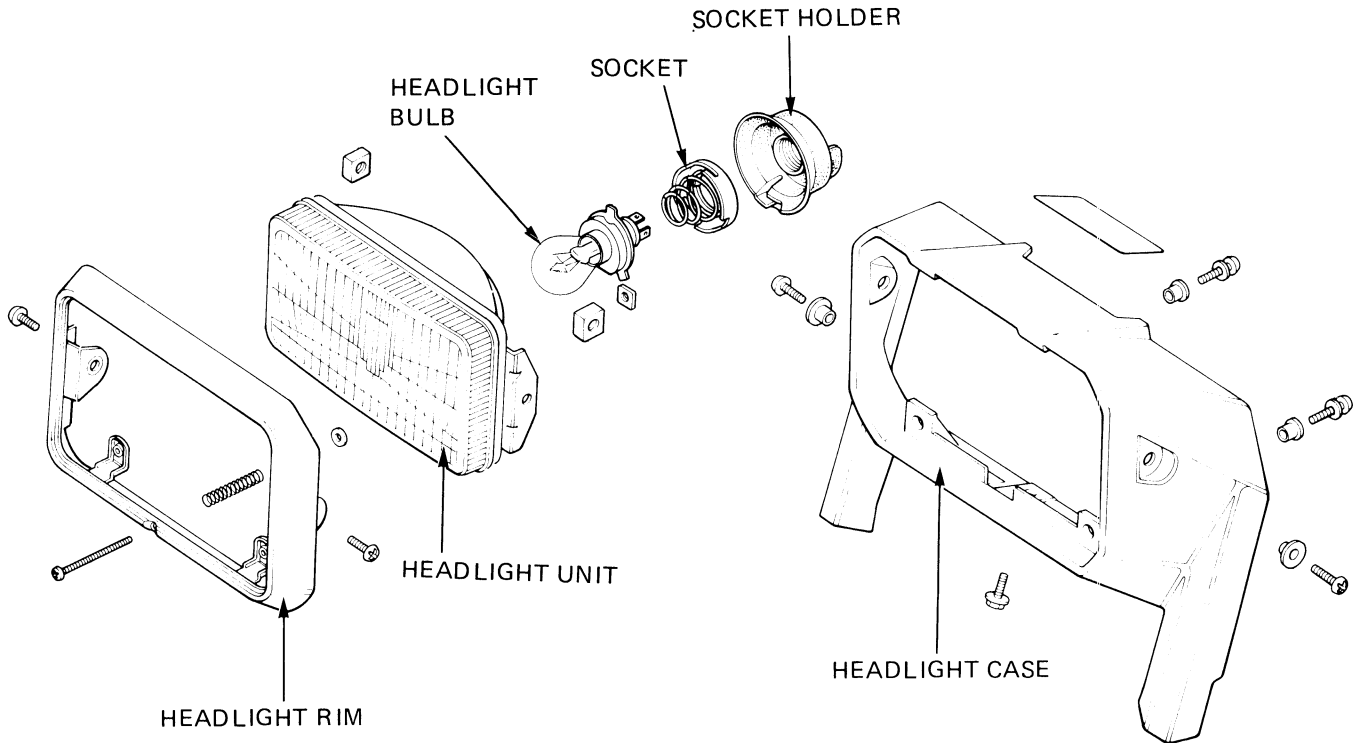

### HEADLIGHT CASE INSTALLATION

Position the headlight on the headlight case, engaging the lugs of the case with the grooves of the headlight.

