




**DISASSEMBLY**

Remove the dust seal, bearings and collar from the axle end of the swingarm.  
Remove the dust seal caps and pivot collars.  
Remove the pivot bushings and bearings.

**NOTE**

Bearings are damaged during removal.  
New bearings must be installed if old bearings are removed.

NEEDLE BEARING REMOVER  
07946-KA50000 or M967-038-XXXXX

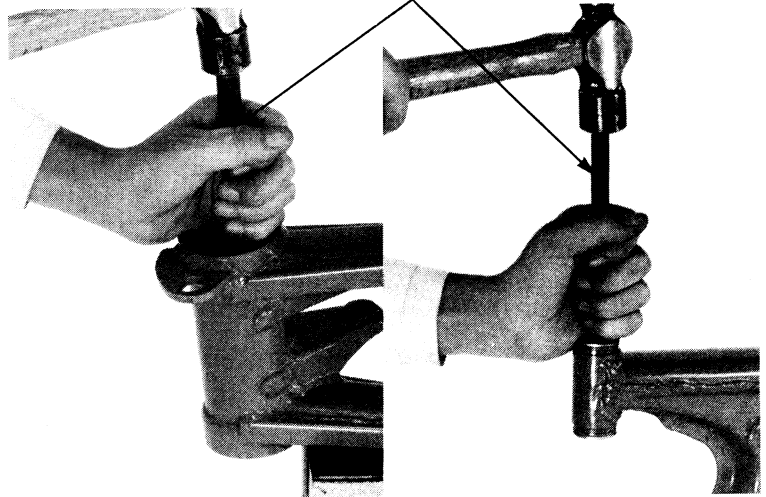

**INSPECTION**

Check the swingarm for cracks or damage.

