



CHAIN SLIDER

SUSPENSION

FRONT

Check the action of the front forks by compressing them several times.

Check the entire fork assembly for signs of leaks or damage.

Replace damaged components which cannot be repaired.

NOTE

Do not repair bent fork tubes. They must be replaced.

Tighten all nuts and bolts to the specified torque values.



REAR

Check the shock absorber for leak or damage.

Check the suspension operation.

Adjust the spring preload if necessary (Page 12-10).

