

TROUBLESHOOTING

Clutch slips when accelerating

- No free play
- Discs worn
- Springs weak

Clutch operation feels rough

- Outer drum slots rough

Jumps out of gear

- Shift drum stopper arm damaged and/or return spring broken

Hard shifting

- Shift spindle pawl bent or damaged
- Shift spindle bent
- Faulty stopper arm

Kick starter slips

- Worn or damaged starter ratchet and/or pinion gear
- Kick starter ratchet out of ratchet guide

Kick starter pedal does not return

- Weak or damaged kick return spring
- Return spring hook out of place

Gearshift pedal does not return

- Bent gearshift spindle
- Broken shift spindle return spring

Vehicle creeps with clutch disengaged

- Too much free play
- Plates warped

Excessive lever pressure

- Clutch cable kinked, damaged or dirty
- Lifter mechanism damaged
- Clutch cable not routed properly