



REAR WHEEL/DRIVE MECHANISM

Remove the four socket bolts and the brake disc from the disc hub.

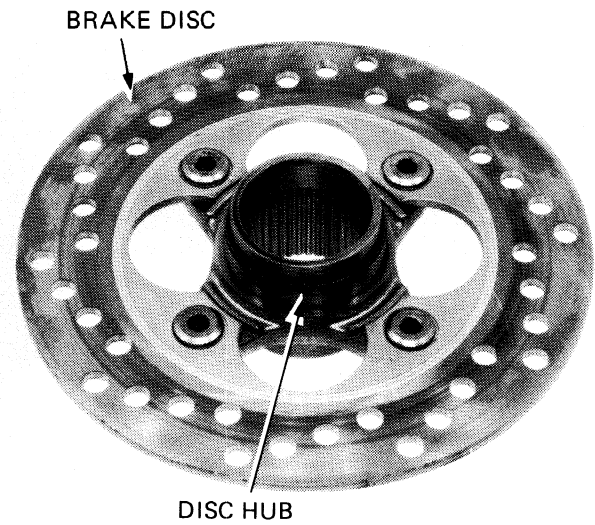

Install the axle nut onto the right axle end. Drive the axle out of the wheel bearings from the right side with a plastic hammer.

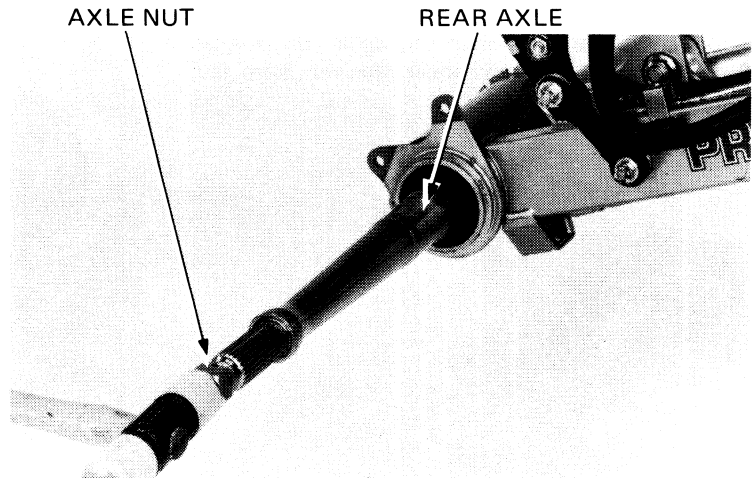

INSPECTION

Place the rear axle in V-blocks and measure the runout.

SERVICE LIMIT: 3.0 mm (0.12 in)

