

EXHAUST CHAMBER REMOVAL

Remove the following:


- seat and rear fender (Page 14-1).
- fuel tank (Page 3-3).

'85:


- exhaust chamber mounting bolt and spring.

AFTER '85:

- exhaust chamber mounting bolt.

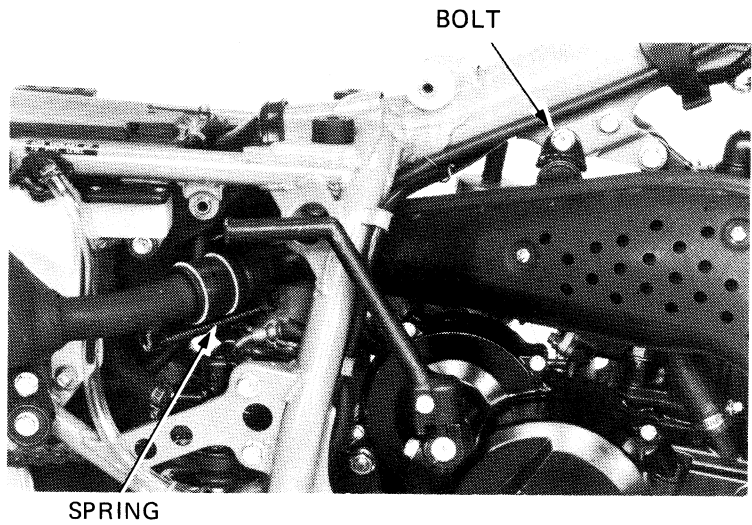

Remove the exhaust chamber joint mounting springs.
Remove the exhaust chamber.

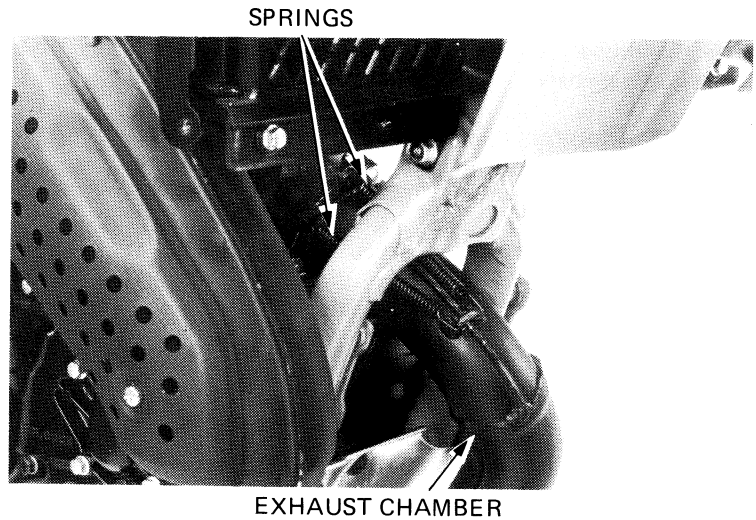

EXHAUST CHAMBER INSTALLATION

Compress the seal ring into the groove of the exhaust joint and connect the exhaust chamber to the joint.

