


MAINTENANCE


AIR CLEANER

Remove the seat by pulling the seat latch lever.
Release the retaining clips holding the air cleaner case cover.
Remove the air cleaner case cover.

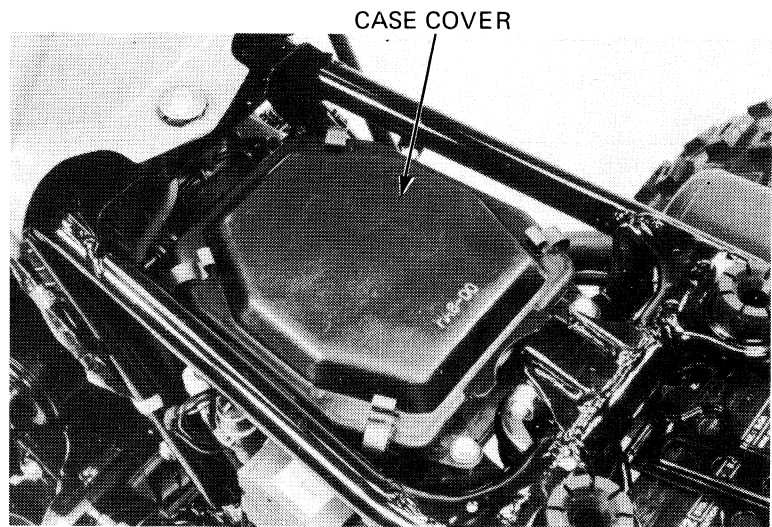

Loosen the air cleaner element band screw.
Remove the element holder attaching screw and remove the air cleaner element assembly from the case.

Remove the element holder by turning it counter-clockwise.
Remove the element band and remove the element from the element core.

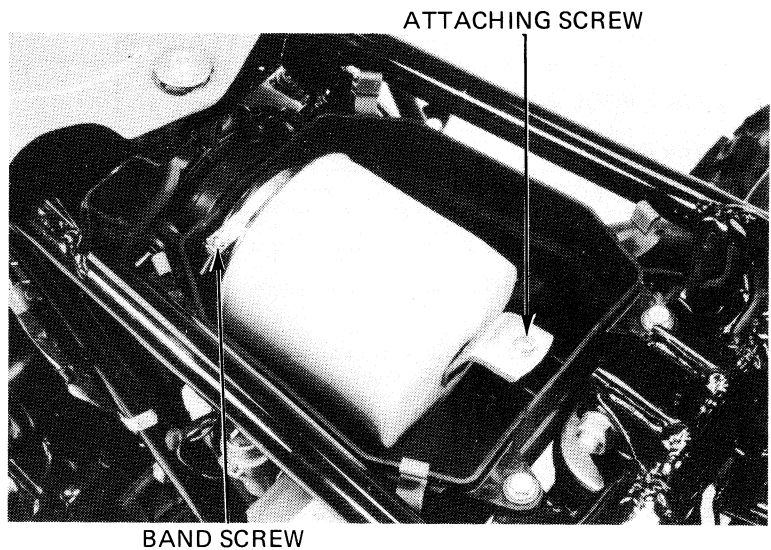

Wash the element in non-flammable or high flash point solvent, squeeze out the solvent thoroughly, and allow to dry.

Soak the element in gear oil (SAE #80–#90) and squeeze out excess.
Place the element onto the element core and replace the element band holder.

Install the element in the air cleaner case.
Install the air cleaner case cover and clips.
Install the seat.

