


## BRAKE SHOES

Replace the brake shoes if the indicator plate aligns with the brake panel index mark when the front brake lever, rear brake lever or pedal is applied.

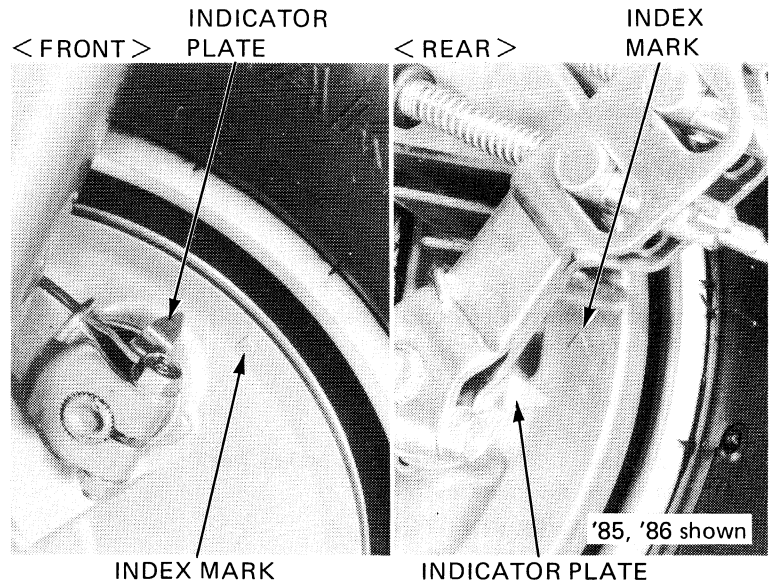

## BRAKE CONTROL LINKAGE

### FRONT BRAKE

Check the brake cable and lever for loose connections, excessive play, or other damage. Replace or repair if necessary.

Disconnect the brake cable at the upper end. Thoroughly lubricate the cable and pivot point with a commercially available cable lubricant to prevent premature wear.

Install the brake cable.

Measure the front brake lever free play at the end of the brake lever.

**FRONT BRAKE LEVER FREE PLAY:**  
15–20 mm (5/8–3/4 in)

Minor adjustments can be made with the upper adjuster on the front brake lever. Slide the rubber cover off the adjuster, loosen the lock nut and adjust.

Major adjustments should be made with the lower adjusting nut. Adjust to the specified free play. After adjustment, make sure that the cut-out of the adjusting nut is seated on the brake arm pin.

