


Remove the two carburetor cover screws and the cover.

Loosen the starter valve nut and disconnect the choke cable from the carburetor.


CARBURETOR COVER

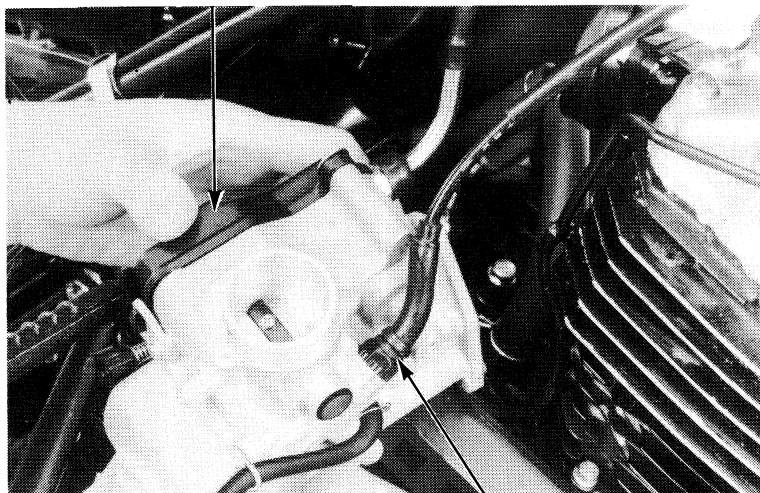

STARTER VALVE UNIT

Disconnect the throttle cable end from the throttle drum and remove the throttle cable from the carburetor body.

THROTTLE CABLE

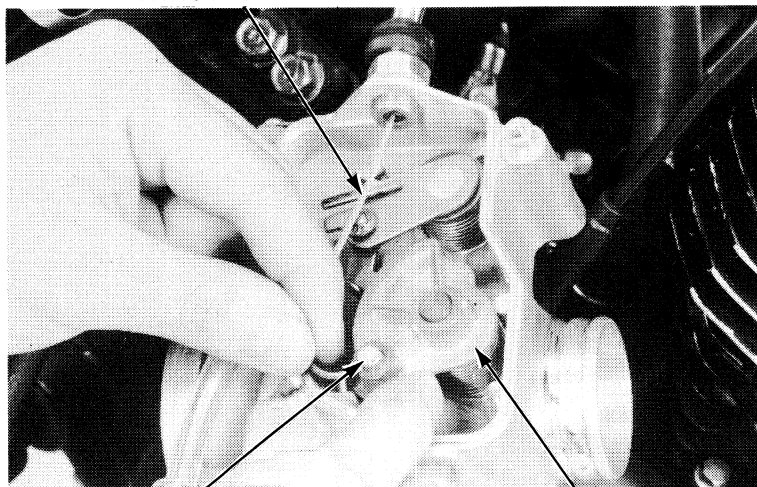

THROTTLE CABLE END


THROTTLE DRUM

FLOAT CHAMBER

FLOAT CHAMBER REMOVAL

Remove the four float chamber screws and the float chamber.

SCREWS

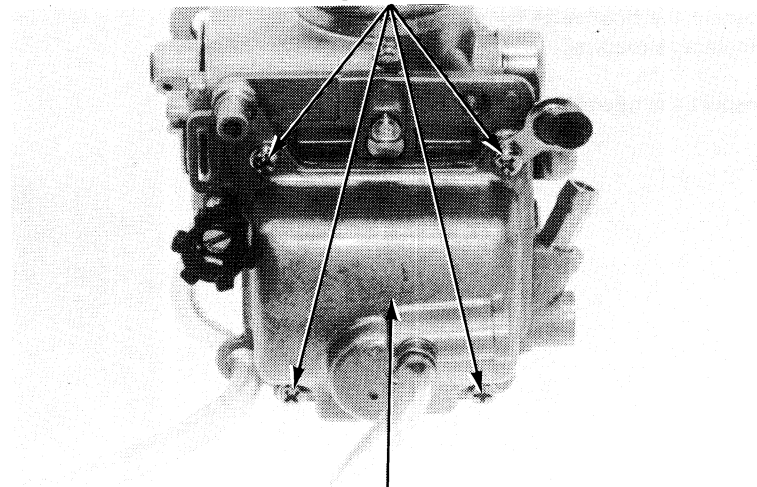

FLOAT CHAMBER