

5. ENGINE REMOVAL/ INSTALLATION

SERVICE INFORMATION	5-1
ENGINE REMOVAL	5-2
ENGINE INSTALLATION	5-5

SERVICE INFORMATION

GENERAL

- A floor jack or other adjustable support is required to support and maneuver the engine.
- The following parts or components can be serviced with the engine installed in the frame:

- | | |
|-----------------------|-----------------------|
| • Carburetor | • Clutch |
| • Oil pump | • Kick starter |
| • Alternator | • Gearshift linkage |
| • Starter motor | • Cylinder head |
| • Cylinder and piston | • Cam chain tensioner |

SPECIFICATIONS

Engine dry weight	46.3 kg (102 lbs)
Engine oil capacity	2.5 lit. (2.6 US qt, 2.2 Imp qt) after disassembly 2.1 lit. (2.2 US qt, 1.8 Imp qt) after draining

TORQUE VALUE

Engine hanger bolt 10 mm bolt	40–50 N·m (4.0–5.0 kg·m, 29–36 ft·lb)
-------------------------------	---------------------------------------