

ENGINE REMOVAL/INSTALLATION

ENGINE REMOVAL

Drain the oil from the engine.
Remove the seat.

Turn the fuel valve OFF, disconnect the fuel tube and remove the fuel tank.

Shift the transmission to neutral.

Disconnect the battery negative cable at the battery.



Remove the skid plate.
Place a floor jack or other adjustable support under the engine.

Remove the following:

- spark plug cap from the spark plug
- ignition coil from the frame
- left foot peg
- gearshift pedal
- drive shaft boot band

Disconnect the following:

- alternator/pulse generator couplers and wire
- starter cable

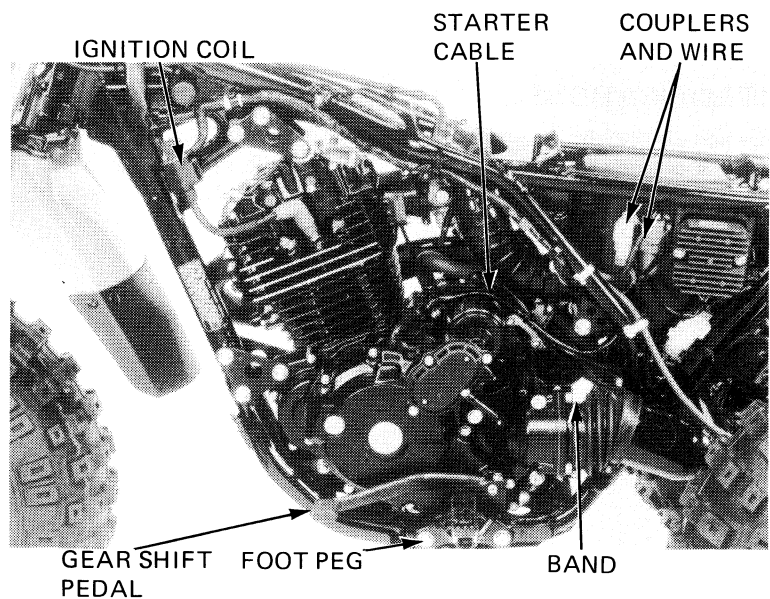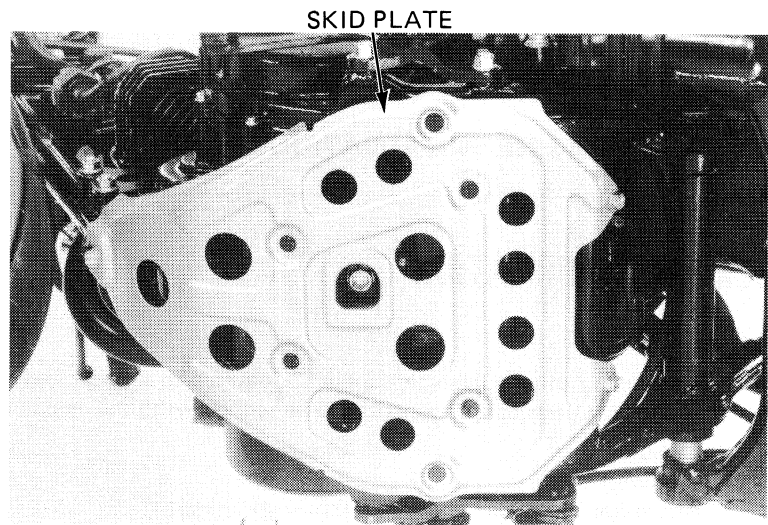

Remove the ground cable and tube clamp.

