



ENGINE REMOVAL/INSTALLATION

Remove the exhaust pipe and muffler.
Remove the foot peg, kick starter.
Disconnect the breather tube from the engine and the reverse lock cable from the right crankcase cover.
Disconnect the neutral/reverse switch wires (Page 8-3).
Remove the carburetor (Page 4-6).

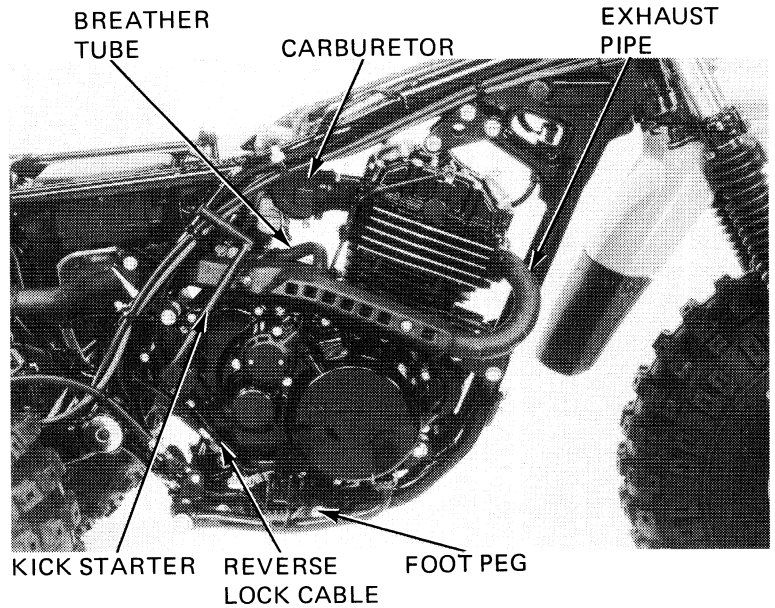

Remove the upper hanger plate bolts and plates.

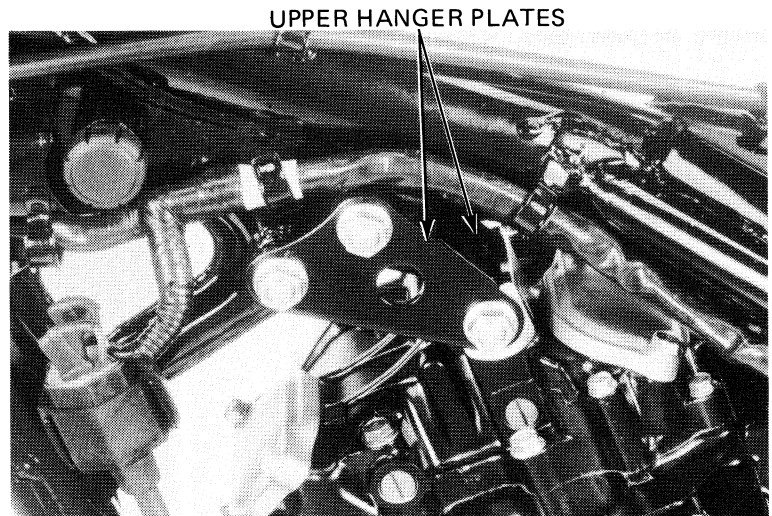

Remove the front hanger plate bolts and plates.

Remove the front lower hanger bolt.

