



ENGINE REMOVAL/INSTALLATION

Remove the upper rear engine hanger bolt and collars.

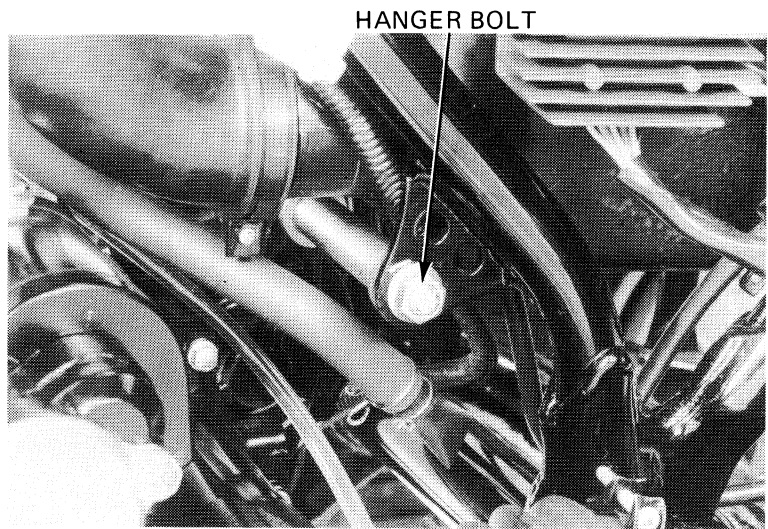

Remove the lower rear hanger bolt.

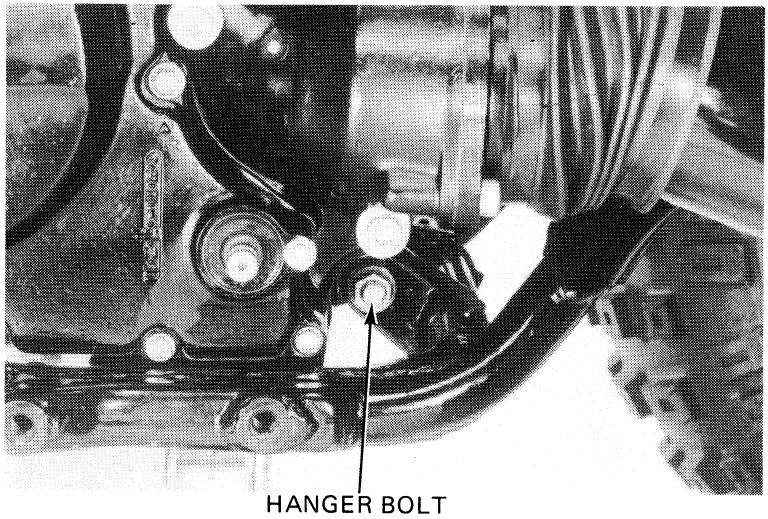

Remove the engine from the right side while disconnecting the drive shaft universal joint from the engine.

