


CYLINDER HEAD COVER REMOVAL/ DISASSEMBLY

Remove the fuel tank (page 4-3).

Remove the upper engine hanger plate bolts and the plates.

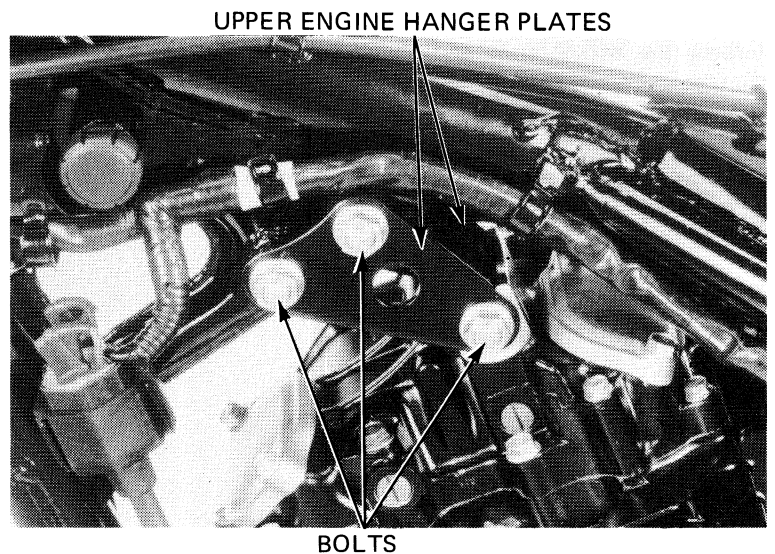

Remove the following:

- the oil bolt and two sealing washers.

NOTE


New sealing washers are required whenever the oil bolt is removed.

- the valve adjusting hole covers.
- the cylinder head cover bolts.

NOTE

Loosen the bolts in 2 or 3 steps in a criss-cross pattern, starting with the center bolt.

- cylinder head cover.
- dowel pins.

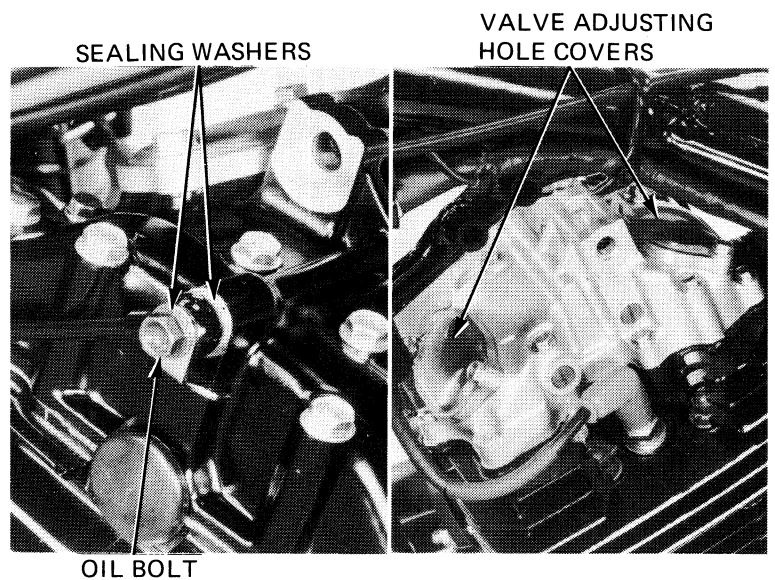

DISASSEMBLY

Groove each rocker arm shaft dowel pin with a grinder and drive the dowel pins out using a screwdriver as shown.

Remove the rocker arm shafts and rocker arms from the cylinder head cover.

