

## CYLINDER HEAD/VALVES

---

### ROCKER ARM/SHAFT INSPECTION

Inspect the rocker arms and shafts for wear or damage.

#### NOTE

If the rocker arms require servicing or replacement, inspect the cam lobes for scoring, chipping or flat spots.

Measure the I.D. of each rocker arm.


**SERVICE LIMIT: 12.05 mm (0.474 in)**

Measure the O.D. of each rocker arm shaft.

**SERVICE LIMIT: 11.92 mm (0.469 in)**

Calculate rocker arm-to-shaft clearance.


**SERVICE LIMIT: 0.08 mm (0.003 in)**

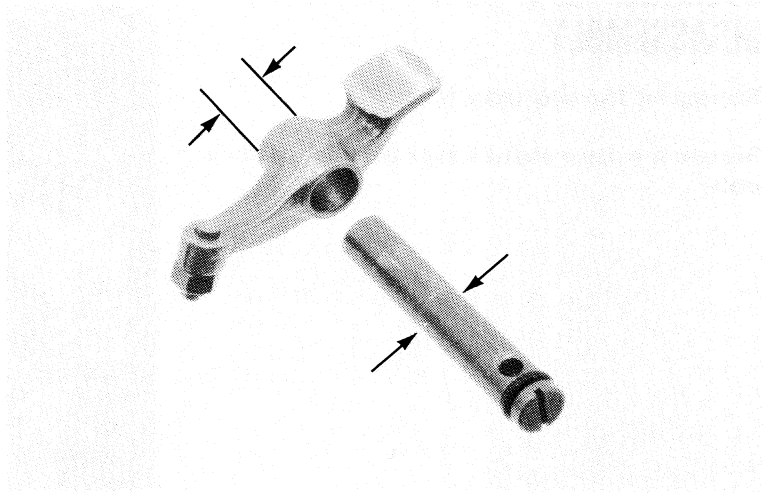

### CAM CHAIN TENSIONER LIFTER REMOVAL/DISASSEMBLY

#### REMOVAL

Remove the two bolts attaching the cam chain tensioner lifter and remove the lifter.

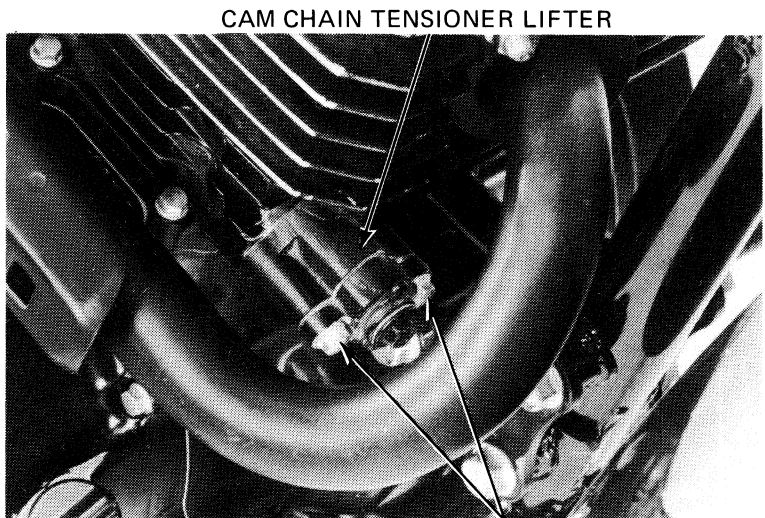

#### DISASSEMBLY/INSPECTION

##### '85, '86 only:

Remove the two screws and disassemble the tensioner lifter.

