



CYLINDER HEAD REMOVAL

Remove the carburetor (Page 4-6) and exhaust pipe (Page 13-3).

Remove the oil pipe mount bolt, oil bolt and sealing washers, and remove the oil pipe.

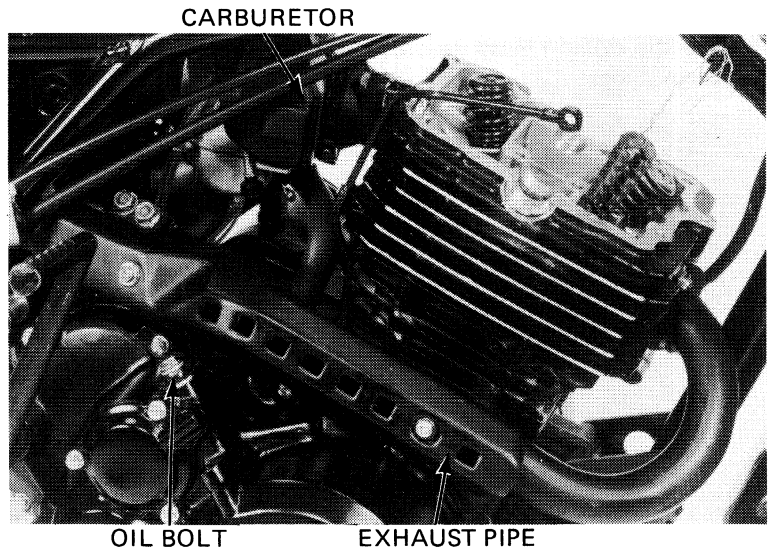

Remove the cylinder head cap nuts and socket bolts in a crisscross pattern in 2 or 3 steps.

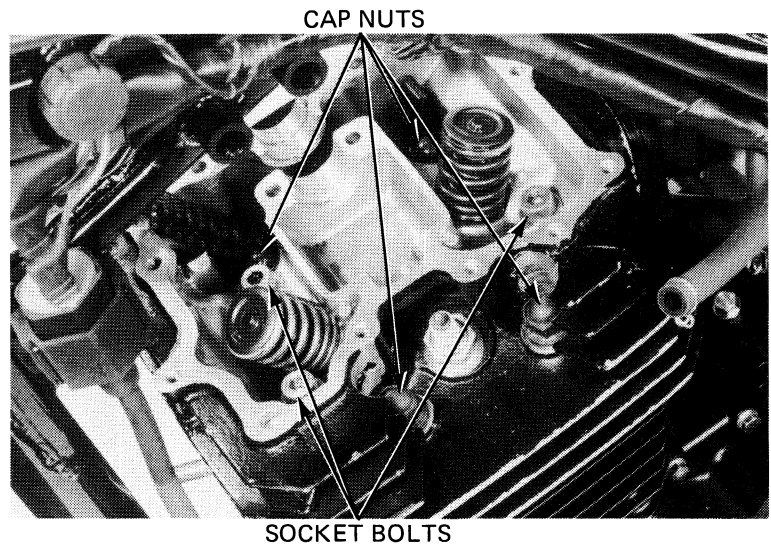

Raise and rotate the cylinder head clockwise and remove it from the right side as shown.

