


CAM CHAIN TENSIONER LIFTER ASSEMBLY/INSTALLATION


ASSEMBLY

'85, '86:

Thread the nut on the push rod until its outside face is flush with the end of the push rod. Hook one end of the spring into the hole in the adjuster and place the adjuster over the nut.

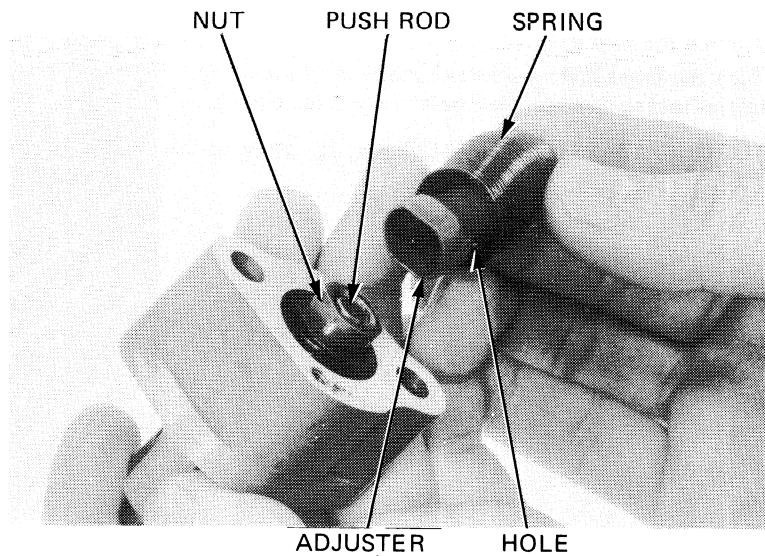

Align the spring hook with the groove in the cover and install.

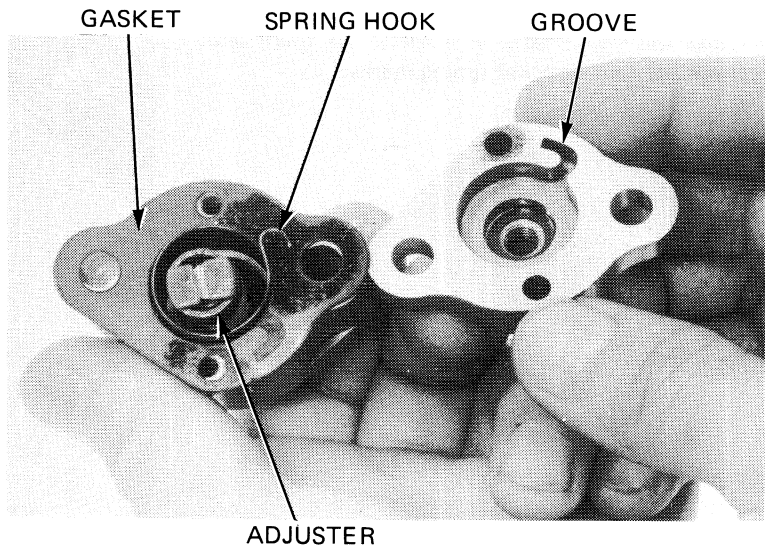

INSTALLATION

'85, '86:

Screw in the adjuster all the way through the hole in the cover and install the tensioner lifter onto the cylinder. Tighten the two tensioner lifter mount bolts and release the adjuster. Install the sealing bolt.

TORQUE: 8–12 N·m (0.8–1.2 kg·m, 6–9 ft·lb)

