

CYLINDER HEAD/VALVES


INSTALLATION

Apply liquid sealant to the mating surfaces of the cylinder head as shown.

NOTE


Do not apply sealant to the camshaft bearing surfaces.

DO NOT APPLY SEALANT TO THIS AREA

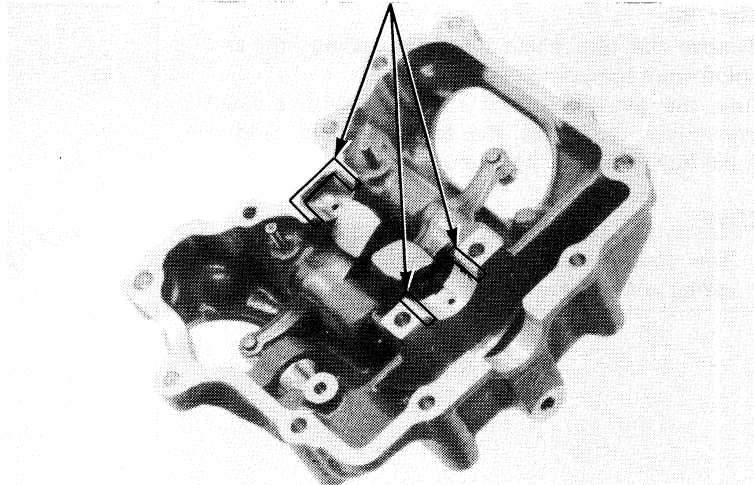

Install the two dowel pins onto the cylinder head and install the cylinder head cover.

DOWEL PINS

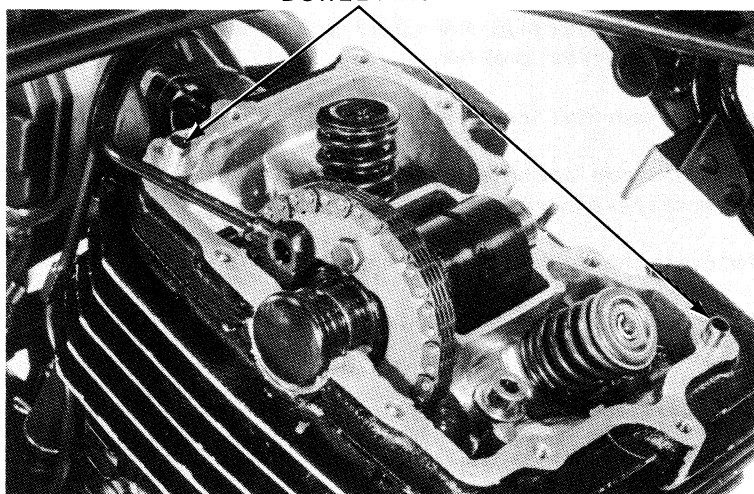

Tighten the cylinder head cover bolts in a crisscross pattern in 2 or 3 steps starting with the center bolt.


TORQUE: 8–12 N·m (0.8–1.2 kg-m, 6–9 ft-lb)

Connect the oil pipe to the cylinder head cover using two new sealing washers and the oil bolt.

TORQUE: 8–12 N·m (0.8–1.2 kg-m, 6–9 ft-lb)

NOTE

Do not reinstall the old washers. New washers must be used to maintain a tight seal.

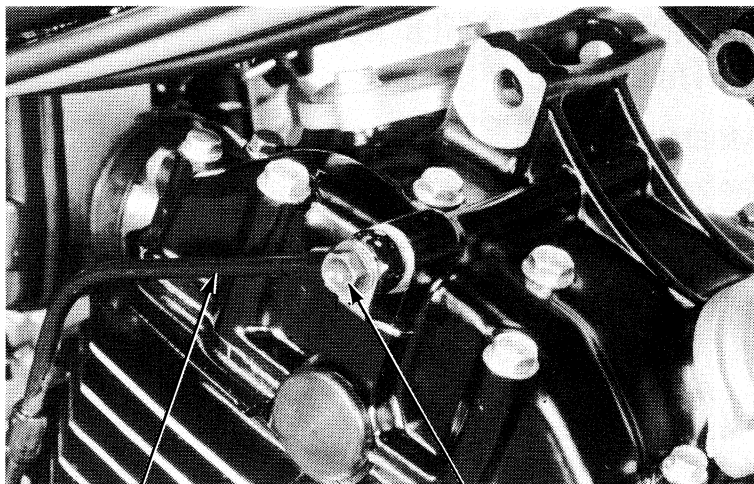

OIL PIPE

OIL BOLT