

Adjust valve clearance (Page 3-5).

Test cylinder compression (Page 3-8).
Connect the spark plug cap to the plug.

Install the upper engine hanger plates and tighten them using three bolts and nuts.

TORQUE: 40–50 N·m (4.0–5.0 kg·m, 29–36 ft·lb)

Install the fuel tank and seat.

