



CLUTCH/OIL PUMP/KICK STARTER

Install the ball reatiner onto the clutch lifter cam.

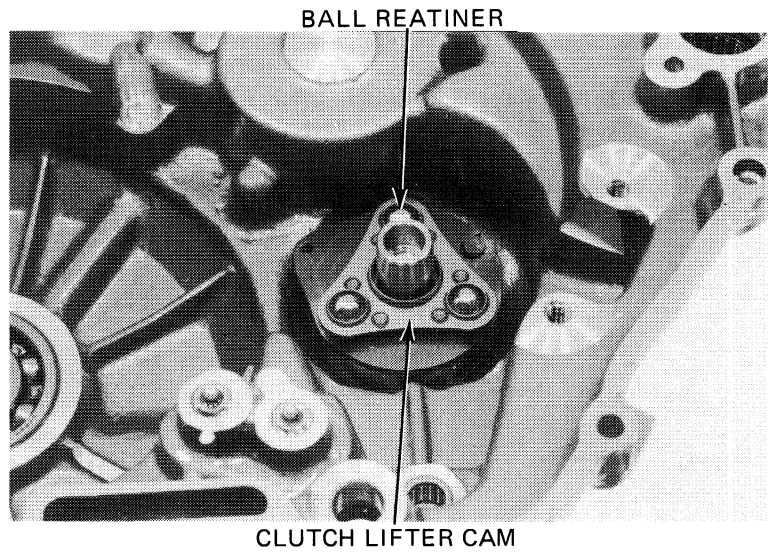

Install the clutch lifter cam with its groove facing the clutch lever bearing hole on the right crankcase cover.

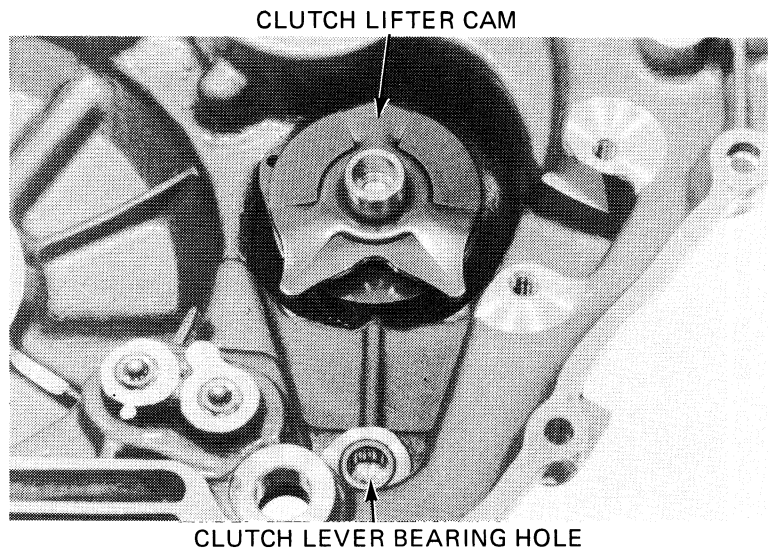

Install the washer, bearing and thrust washer onto the clutch lifter cam.

