


OIL FILTER SCREEN


Drain the engine oil.
 Remove the right crankcase cover, gasket and dowel pins (Page 8-2).
 Remove the oil filter screen from the crankcase.
 Clean and inspect the filter screen; replace if necessary.
 Install the filter screen in the right crankcase, then install the cover in the reverse order of removal (Page 8-3).

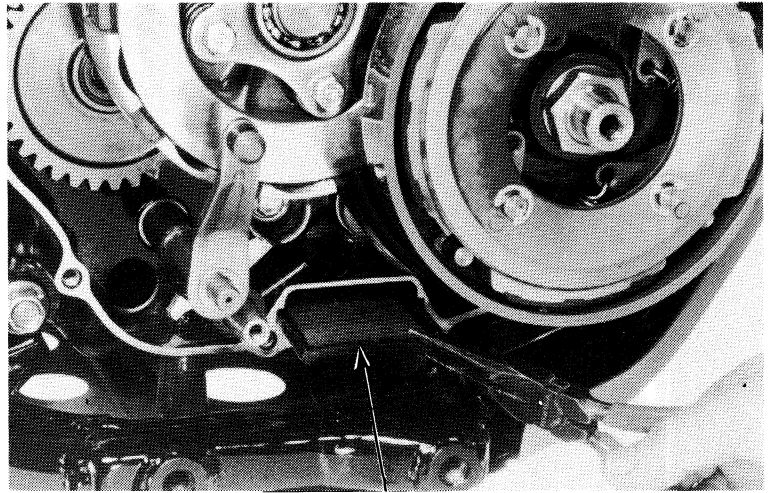

OIL FILTER SCREEN

NEUTRAL/REVERSE ROTOR REPLACEMENT

Remove the washer and clutch lever.
 Remove the reverse shaft arm from the right crankcase.
 Remove the washer and spring from the reverse shaft arm.
 Remove the neutral/reverse rotor bolt, neutral/reverse rotor, reverse lock plate and pins.

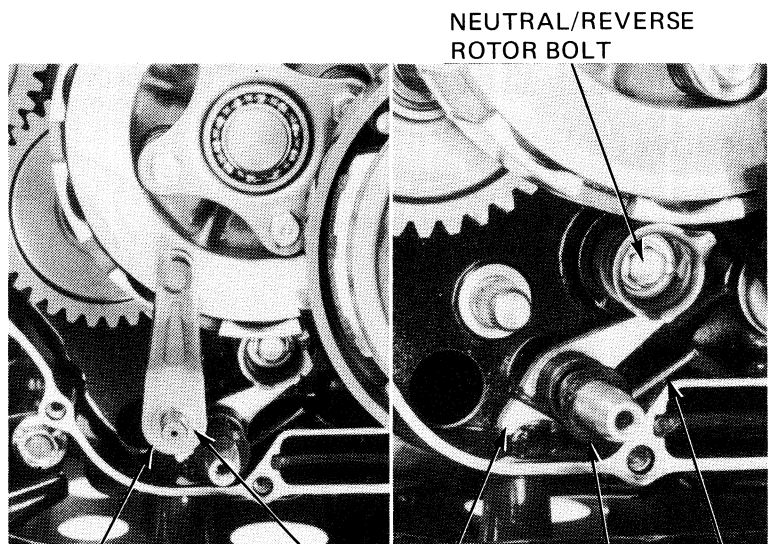


CLUTCH LEVER WASHER REVERSE SHAFT ARM WASHER SPRING

Align the reverse lock plate hole with the pin in the shift drum and install the lock plate.
 Align the neutral/reverse rotor holes with the reverse lock plate pins, install the neutral and reverse rotor using the bolt.

Rotate the neutral/reverse rotor and check for smooth operation.

Install the reverse shaft arm.

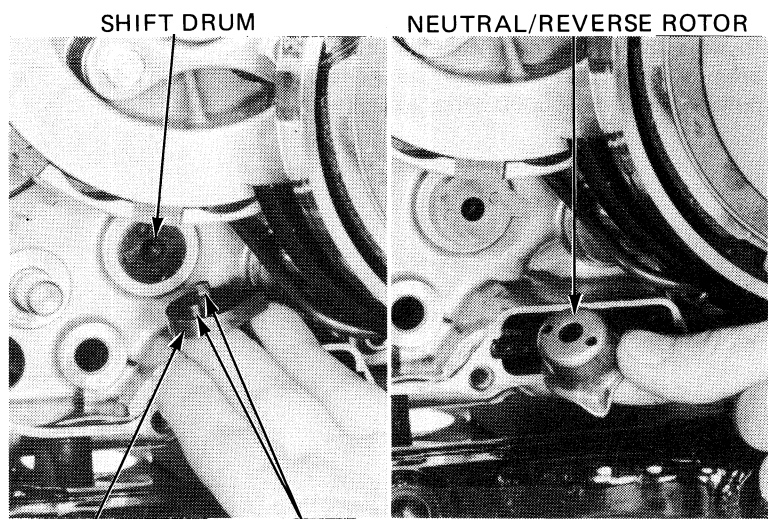

SHIFT DRUM NEUTRAL/REVERSE ROTOR
 REVERSE LOCK PLATE PINS