


CLUTCH/OIL PUMP/KICK STARTER

Measure the height of the clutch spring.


SERVICE LIMIT: 3.55 mm (0.140 in)

Replace the spring if it is shorter than the service limit.

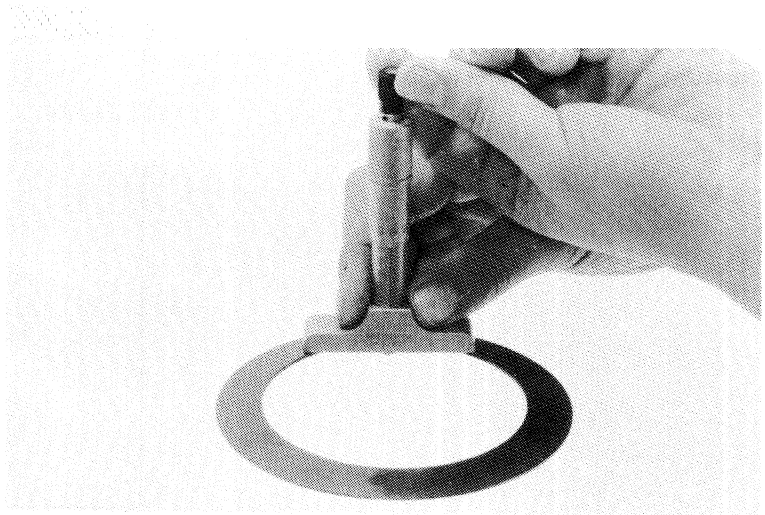

Check the inside of the centrifugal clutch drum for scratches or excessive wear. Replace if necessary. Measure the I.D. of the clutch drum.

SERVICE LIMIT: 140.2 mm (5.52 in)

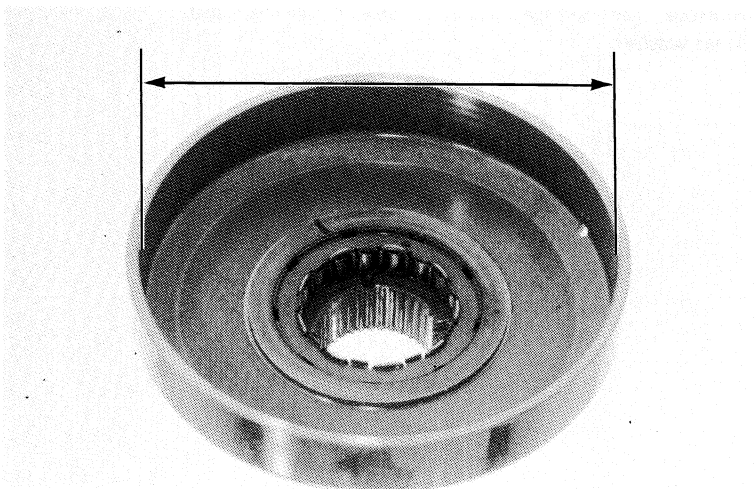

Inspect the one way clutch for smooth operation. Check the rollers for excessive wear.

