


## CLUTCH/OIL PUMP/KICK STARTER

---

Remove the clutch outer guide from the mainshaft.

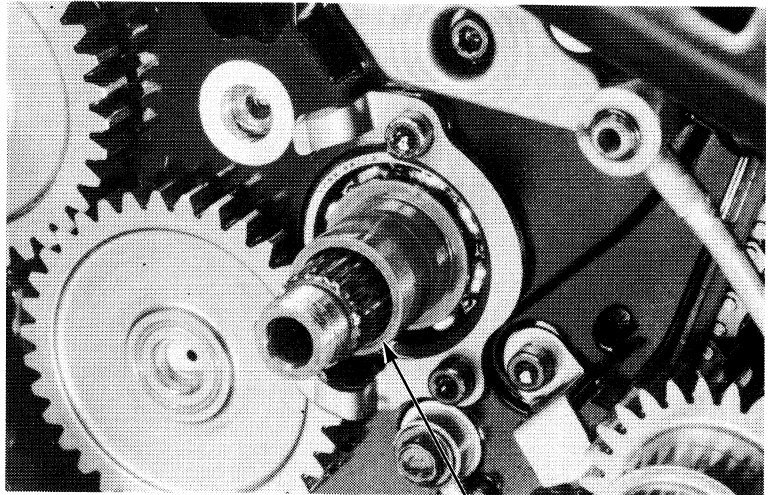


CLUTCH OUTER GUIDE

### INSPECTION

Check the slots of the clutch outer for nicks, cuts or indentations made by the clutch discs. Replace if necessary.

Measure the O.D. of the clutch outer guide.

**SERVICE LIMIT: 27.92 mm (1.099 in)**

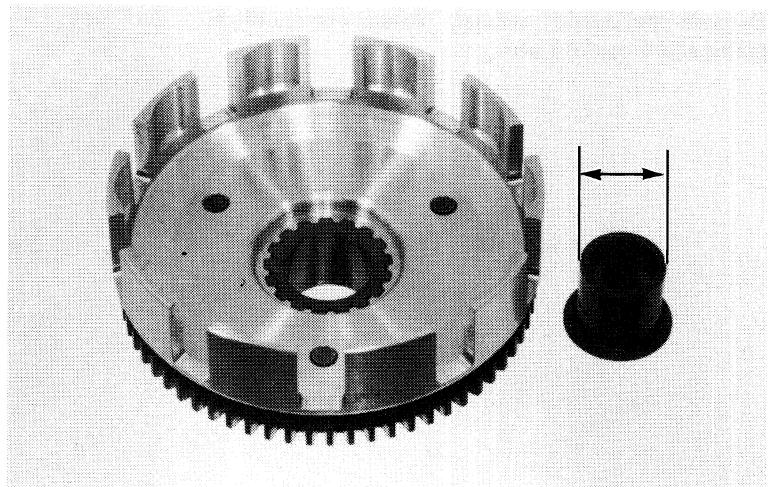

Measure the spring free length.

**SERVICE LIMIT: 34.0 mm (1.34 in)**

