

LEFT CRANKCASE COVER REMOVAL

Remove the starter reduction cover and gears (Page 9-2).

Remove the seat.

Remove the gearshift pedal.

Disconnect the alternator/pulse generator couplers and wire.

Remove the left crankcase cover mounting bolts and cover.

NOTE

To ease the left crankcase cover removal, loosen the engine mount bolts and move the engine to provide adequate clearance between the cover and frame.

