


LEFT CRANKCASE COVER INSTALLATION

Install a new gasket, the dowel pins.

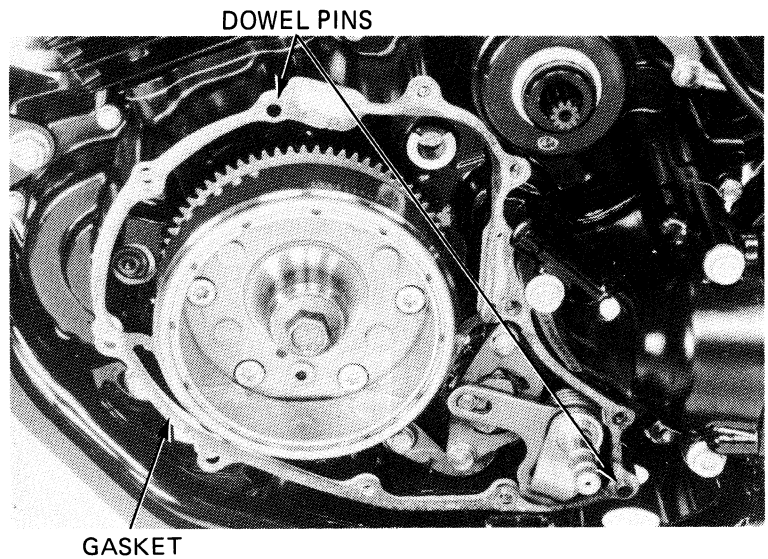

Install the left crankcase cover and bolts.

Install the starter reduction gears and cover (Page 9-3).

Connect the alternator/pulse generator couplers and wire.

Align the punch marks on the gearshift pedal and spindle and install the gearshift pedal.

Install the seat.

Check the ignition timing (Page 14-4).

Check for smooth shifting in all gears.

