


BEARING REPLACEMENT

Remove the balancer bearings using the bearing remover tool.

Drive the right crankcase bearing out from the outside using driver 07749-0010000 and attachment, 42 x 47 mm 07746-0010300.

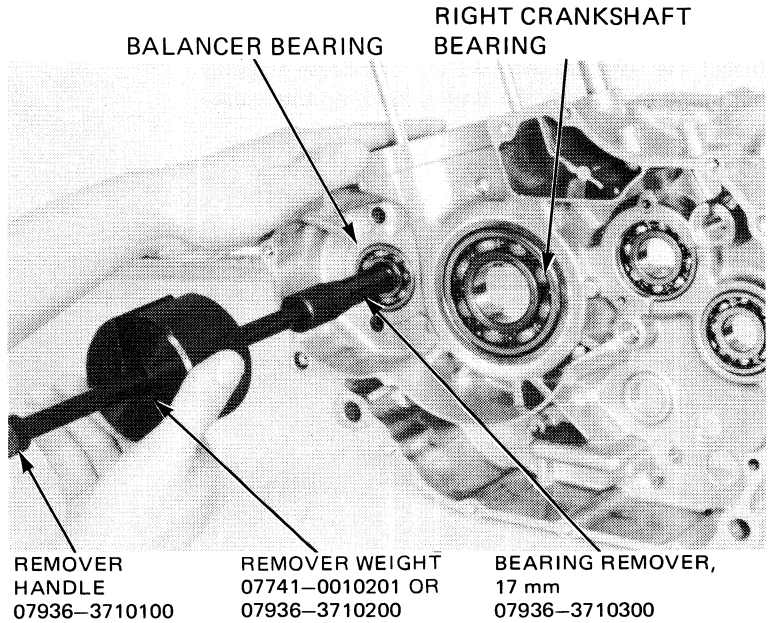

INSTALLATION


Drive new bearings with the following tools.

Right crankshaft bearing:

- Driver 07749-0010000
- Attachment, 72 x 75 mm 07746-0010600
- Pilot, 35 mm 07746-0040800

Balancer bearings:

- Driver 07749-0010000
- Attachment, 37 x 40 mm 07746-0010200
- Pilot, 17 mm 07746-0040400

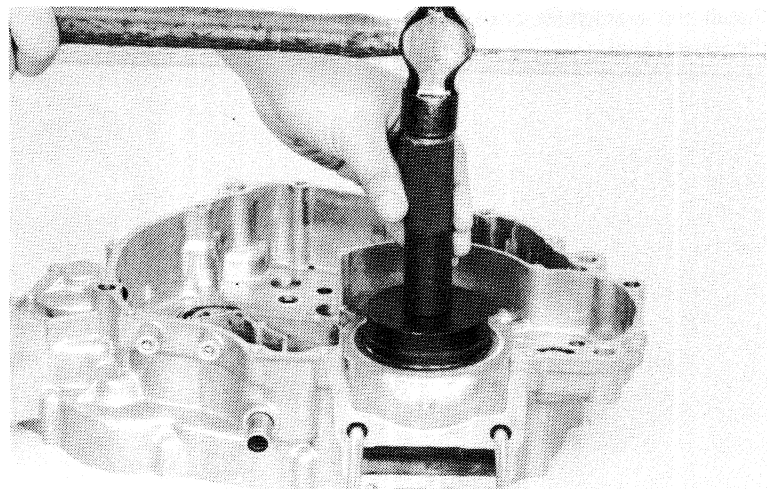

Drive new left crankshaft bearing into the left crankcase.

