



Remove the three output gear case mounting bolts and remove the output gear case.

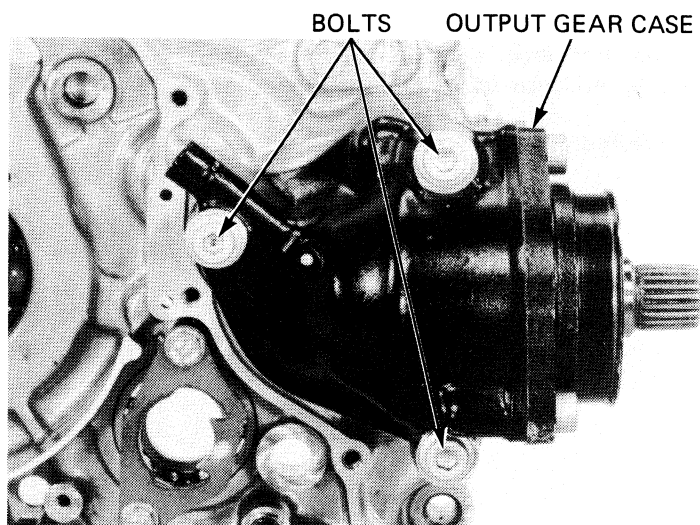

Remove the oil orifice from the left crankcase.
Remove the O-ring and dowel pin from the output gear case.

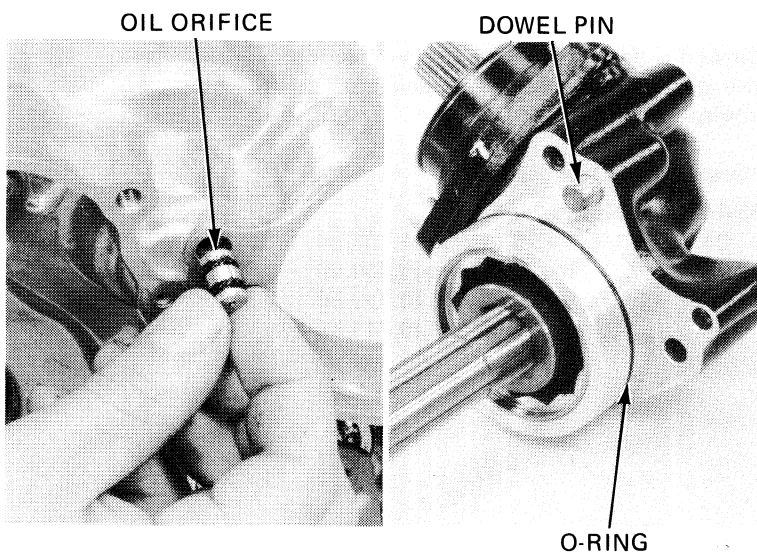

INSPECTION

Check the shift fork and shaft for wear, bending or damage.

Measure the I.D. of the shaft hole.

SERVICE LIMIT: 13.04 mm (0.513 in)

Measure the shift fork claw thickness.

SERVICE LIMIT: 4.50 mm (0.177 in)

Measure the shift fork shaft O.D.

SERVICE LIMIT: 12.96 mm (0.510 in)

