


Remove the 8 mm socket bolts attaching the output driven gear bearing holder and remove the driven gear assembly.

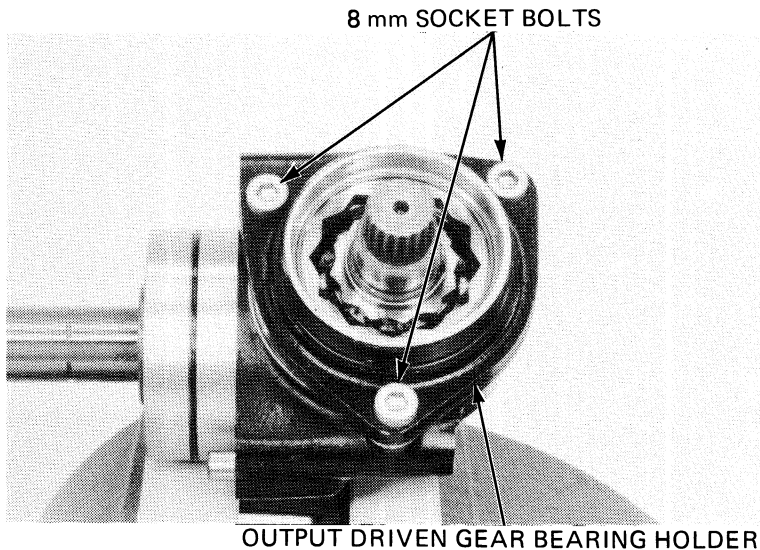


OUTPUT DRIVEN GEAR BEARING REPLACEMENT

NOTE

The driven gear must be removed before replacing the bearing.

Place the bearing holder in a press and remove the driven gear.

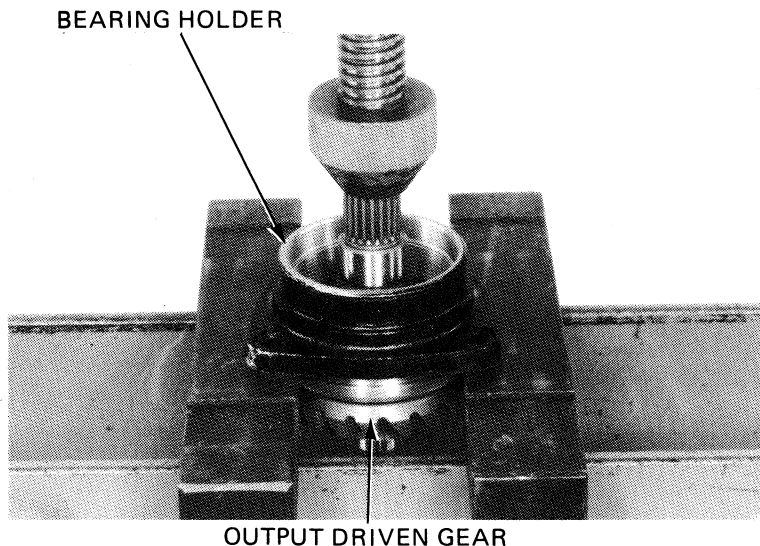

Place the bearing holder in the press and remove the bearing.

