


CRANKCASE/CRANKSHAFT/TRANSMISSION

Press in a new bearing.


DRIVER
07749-0010000

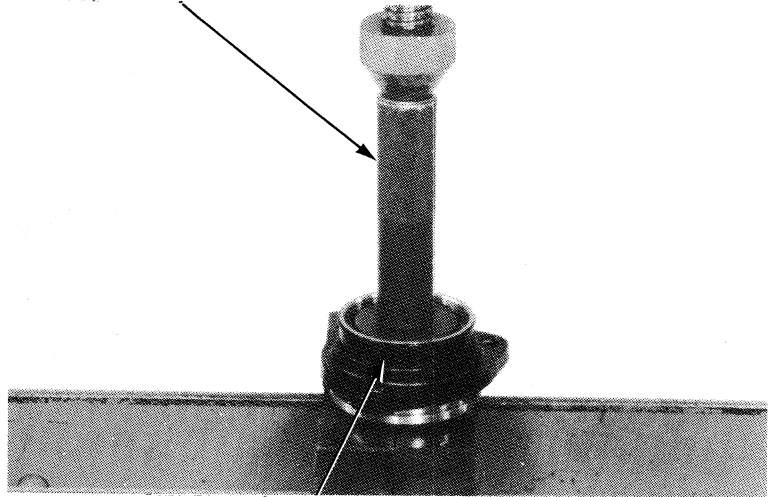

ATTACHMENT, 52 x 55 mm 07746-0010400
PILOT, 28 mm 07746-0041100

Press the output driven gear into the bearing.

OUTPUT DRIVEN GEAR BEARING HOLDER

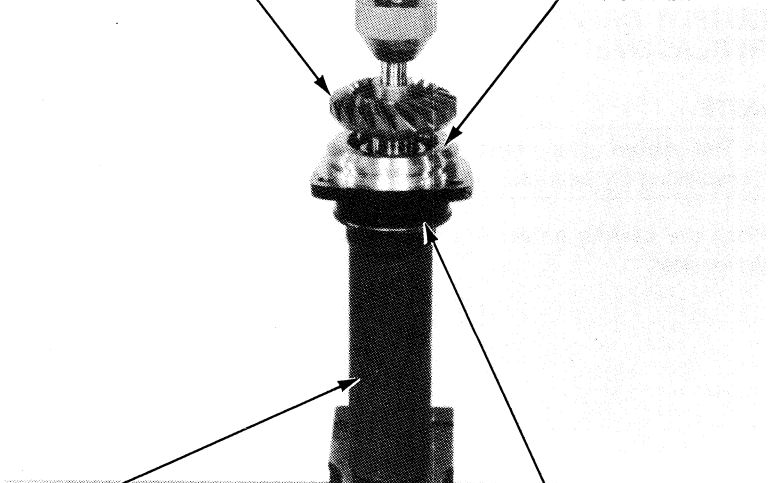

DRIVER
07746-0030100

ATTACHMENT, 30 mm I.D.
07746-0030300

OUTPUT DRIVEN GEAR BEARING


OUTPUT DRIVEN GEAR CASE BEARING REPLACEMENT

Heat the output gear case around the driven shaft bearing to 80°C (176°F).

CAUTION

Always wear gloves when handling a heated gear case.

Remove the bearing with the bearing remover.

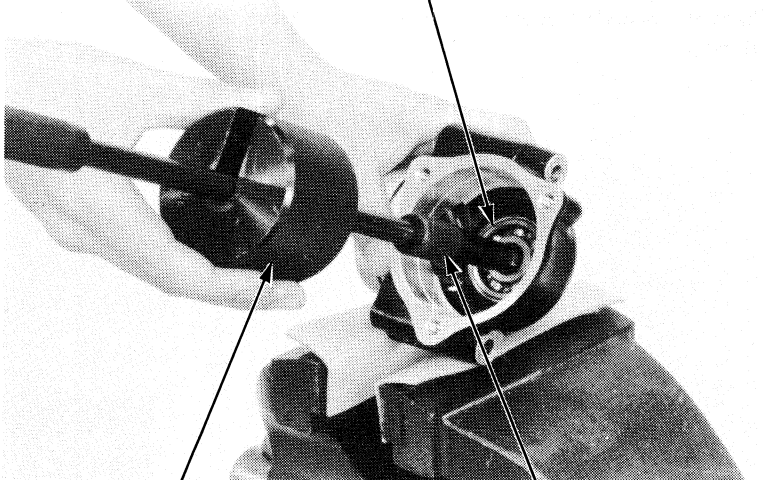

REMOVER WEIGHT
07741-0010201 or
07936-3710200

BEARING REMOVER, 15 mm
07936-KC10500