


## FRONT WHEEL/BRAKE/SUSPENSION/STEERING

Loosen the throttle cable adjuster.

Bend down the lock washer tab and remove the nut and lock washer.


Disconnect the throttle cable from the throttle arm.

Remove the throttle arm, spring and throttle lever from the throttle housing.

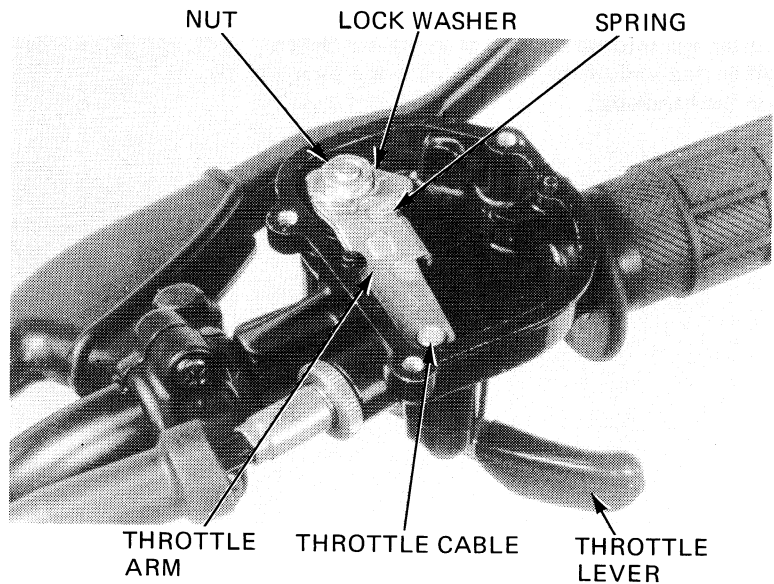

### ASSEMBLY

Connect the throttle cable to the throttle arm. Install the throttle arm spring and arm onto the throttle lever aligning their flats.

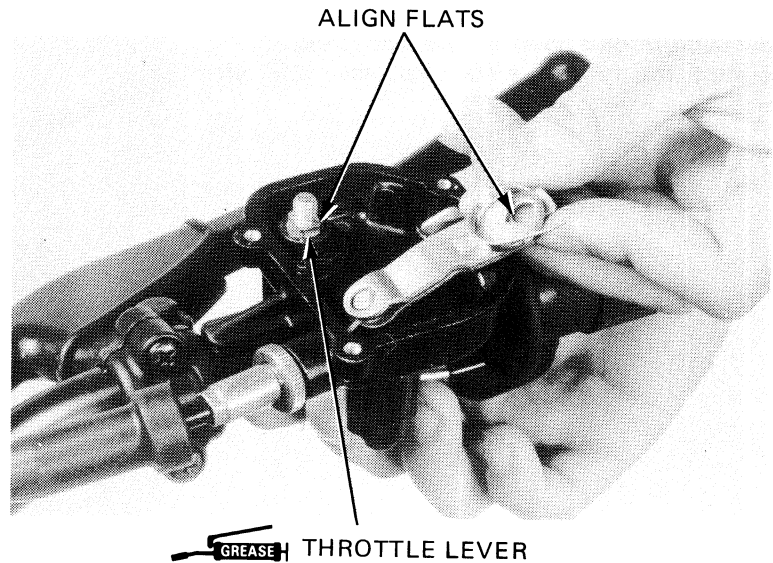

Install a new lock washer and nut. Bend up the lock washer tab against the nut.

Install a new gasket and throttle housing cover using the three screws.

Adjust the throttle lever free play (Page 3-7).

