

## FRONT WHEEL

### FRONT WHEEL REMOVAL


Raise the front wheel off the ground by placing a block or work stand under the engine.

Remove the front brake adjusting nut and disconnect the front brake cable.



FRONT BRAKE ADJUSTING NUT

Loosen the axle holder nuts and unthread the front axle.

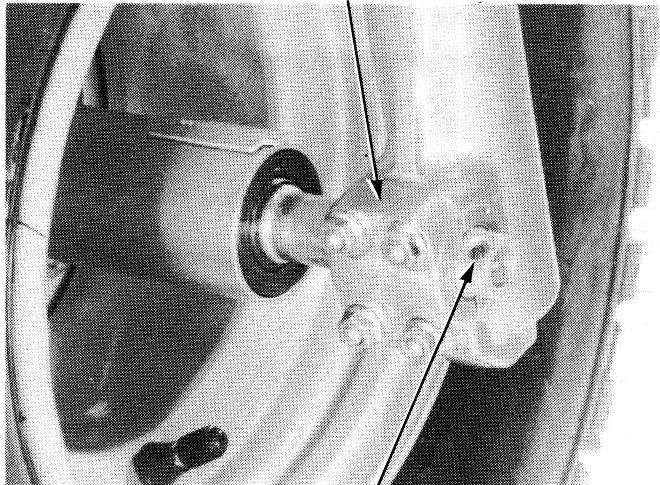

FRONT AXLE HOLDER

FRONT AXLE

### FRONT AXLE INSPECTION

Set the axle in V-blocks, rotate and measure the runout.

**SERVICE LIMIT: 0.5 mm (0.02 in)**

