


FRONT BRAKE

BRAKE PANEL REMOVAL

Remove the front wheel (Page 11-7).
Remove the brake panel from the front wheel.

BRAKE DRUM INSPECTION


Measure the I.D. of the brake drum.
SERVICE LIMIT: 141 mm (5.6 in)

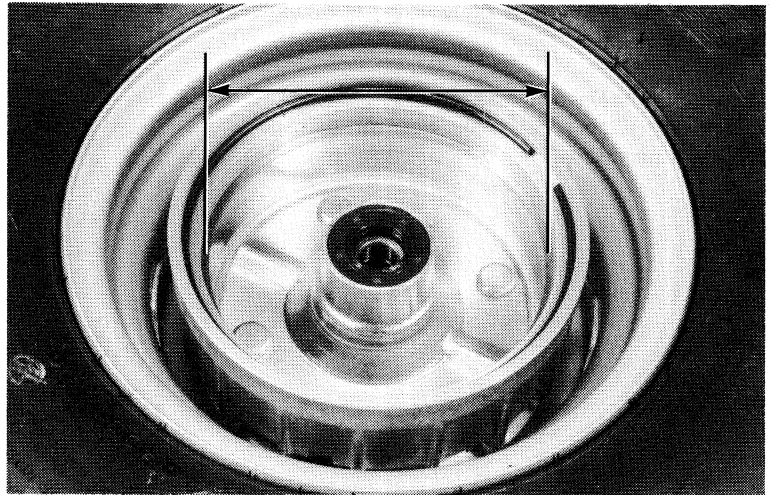

BRAKE LINING INSPECTION

Measure the brake lining thickness.
SERVICE LIMIT: 2 mm (0.1 in)

Replace the brake shoes if they are thinner than the service limit.

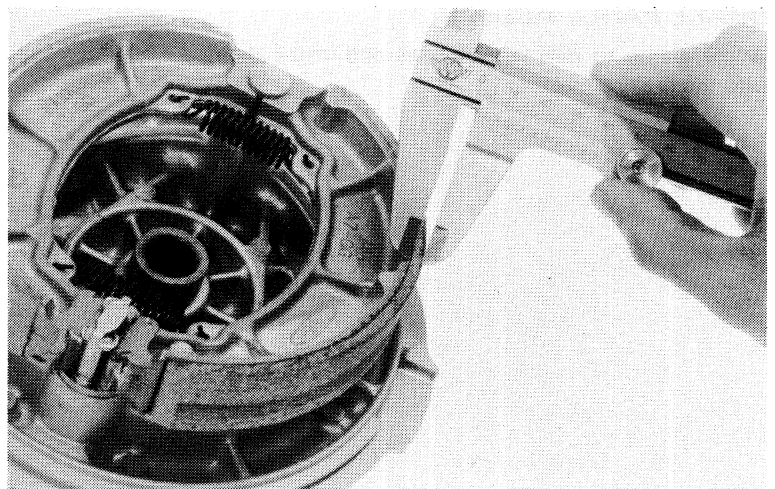

BRAKE PANEL DISASSEMBLY

Expand and remove the brake shoes by hand.

