


FRONT WHEEL/BRAKE/SUSPENSION/STEERING


Remove the brake arm bolt, brake arm, indicator plate and spring.

Remove the brake cam and felt seal.
Check the rubber seals for wear or damage and replace if necessary.

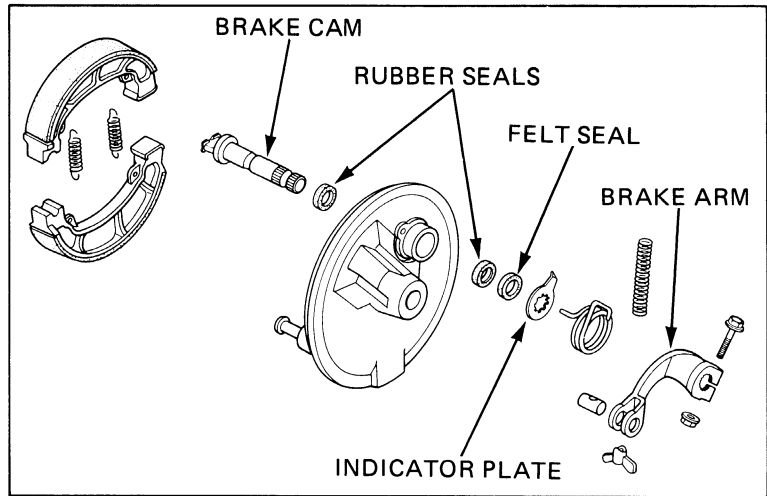

BRAKE PANEL ASSEMBLY

Apply grease to new rubber seals and install them into the brake panel.

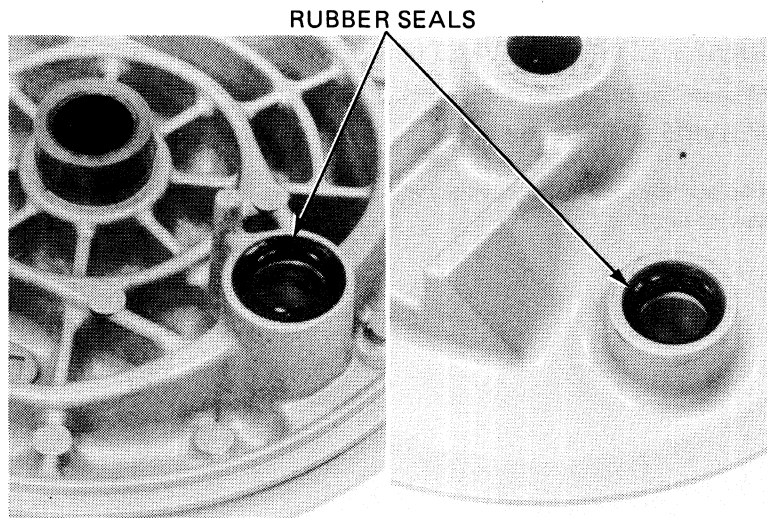

Apply grease to the brake anchor pin and brake cam.

WARNING

- *A contaminated brake lining reduces stopping power.*
- *Keep grease off the linings. Wipe excess grease off the cam.*

Install the brake cam into the brake panel.

