


Install the fork spring B into the fork tube with the small diameter coil end down.


Install the spacer and spring A.

Install the fork cap into the fork tube and tighten it.

TORQUE: 15–30 N·m (1.5–3.0 kg-m, 11–22 ft-lb)

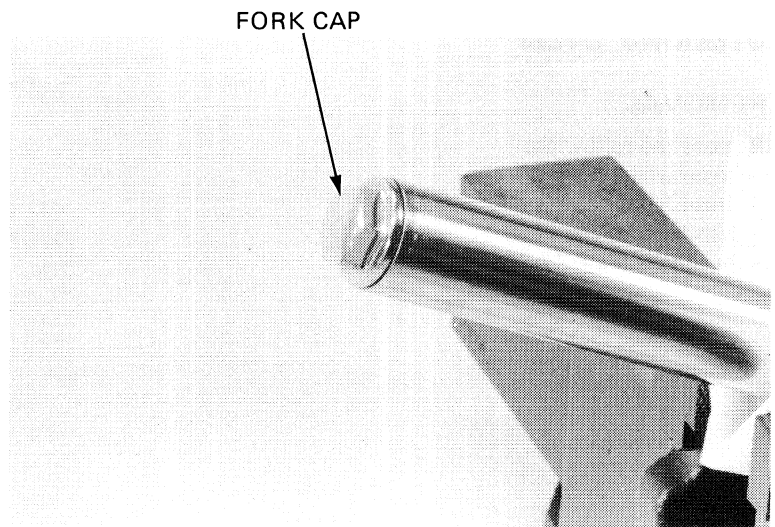

Install the fork boot.

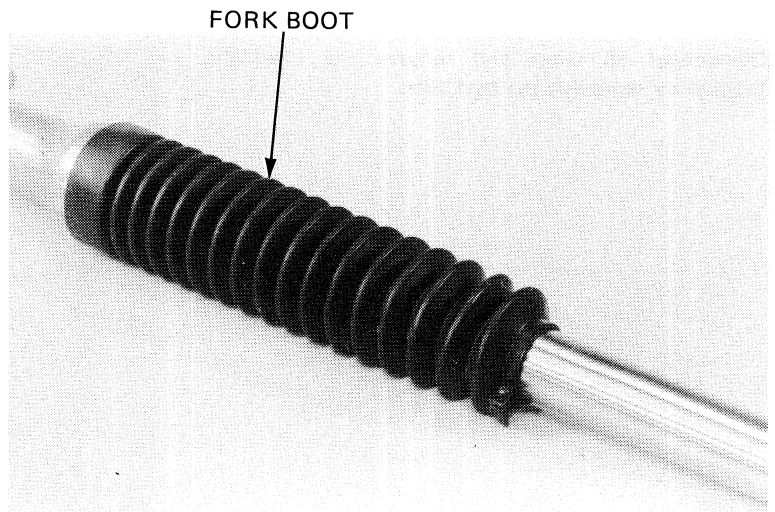

INSTALLATION

Install the forks and loosely tighten the upper and lower pinch bolts.

Install the fork top rings in the grooves in the fork tubes.

With the front brake applied, pump the forks up and down several times to seat the parts.

Tighten the upper and lower pinch bolts.

TORQUE: 30–35 N·m (3.0–3.5 kg-m, 22–25 ft-lb)

Slide the fork boots up to the steering stem and tighten the boot hands.

Install the removed parts in the reverse order of removal.

