


## FRONT WHEEL/BRAKE/SUSPENSION/STEERING

Remove the steering stem nut and lock washer.  
Remove the forks (Page 11-20).  
Remove the fork bridge.


EXTENSION 07716-0020500  
LOCK NUT WRENCH, 30 x 32 mm 07716-0020400  
OR COMMERCIALY AVAILABLE IN U.S.A.

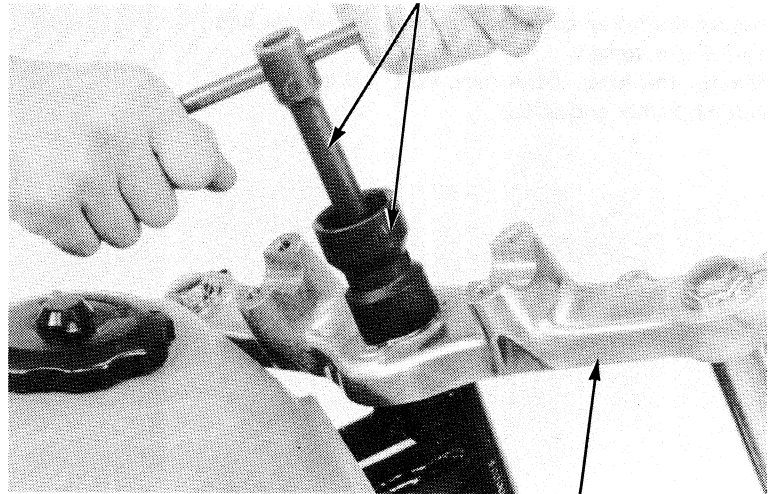

FORK BRIDGE

Remove the bearing adjustment nut.

STEERING STEM SOCKET  
07916-3710100 EXTENSION 07716-0020500 OR  
COMMERCIALY AVAILABLE IN U.S.A.

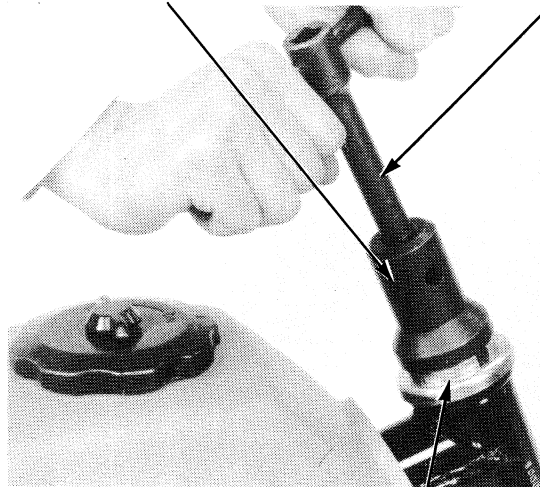


BEARING ADJUSTMENT NUT

Remove the steering stem, upper cone race, dust seal and upper and lower steel balls.

### NOTE:

The steel ball bearings are loose and easily dropped. Place shop towels on the floor to catch any that do drop.

UPPER CONE RACE DUST SEAL

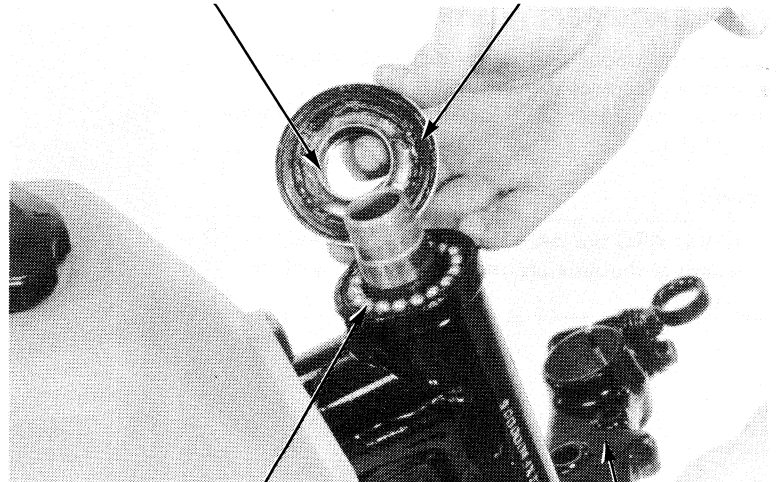

UPPER STEEL BOLLS

STEERING STEM